

Gateway Computer

# User Guide





# Contents

<b>1</b>	<b>Getting Help</b>	<b>1</b>
	Gateway Web site	3
	Using Support	3
	Help and Support	5
	Searching for a topic	6
	BigFix	6
	Using Your Computer guide	7
	Online help	7
	Gateway contact information	8
<b>2</b>	<b>Checking Out Your Gateway Computer</b>	<b>9</b>
	Desktop PC Front	10
	Desktop PC Back	12
	Identifying your model	15
	Gateway model and serial number	15
	Microsoft Certificate of Authenticity	15
	Finding your specifications	16
	Accessories	16
<b>3</b>	<b>Getting Started</b>	<b>19</b>
	Working safely	20
	Reducing eye strain	20
	Setting up your computer desk and chair	20
	Setting up your computer and computer accessories	21
	Sitting at your computer	21
	Avoiding discomfort and injury from repetitive strain	21
	Protecting from power source problems	22
	Checking the voltage selection	22
	Starting your computer	23
	Waking up your computer	24
	Turning off your computer	24
	Restarting (rebooting) your computer	25
	Using the keyboard	26
	Keyboard features	26
	Using the mouse	28
	Adjusting the volume	30
	Configuring the audio jacks	30
	Connecting the dial-up modem	31
	Connecting to a cable or DSL modem or to a wired Ethernet network	31
	Installing a printer, scanner, or other peripheral device	32

<b>4</b>	<b>Using Drives and Ports</b>	<b>33</b>
	Using the diskette drive	34
	Using the memory card reader	35
	Memory card types	35
	Inserting a memory card	36
	Using the CD or DVD drive	37
	Identifying drive types	37
	Inserting a CD or DVD	38
	Playing a CD	39
	Playing a DVD	39
	Creating CDs and DVDs	39
<b>5</b>	<b>Maintaining Your Computer</b>	<b>41</b>
	Caring for your computer	42
	Updating Windows	42
	Protecting your computer from viruses	43
	Cleaning your computer	46
	Cleaning the exterior	46
	Cleaning the keyboard	46
	Cleaning the computer display	47
	Cleaning the mouse	47
	Cleaning CDs or DVDs	47
	Restoring your system	48
	Microsoft System Restore	48
	Reinstalling programs and drivers	48
	Restoring your computer to the original configuration	49
	Preventing static electricity discharge	50
	Opening the case	51
	Removing the side panel	51
	Removing the front bezel	52
	Closing the case	53
	Replacing the side panel	53
	Replacing the front bezel	54
	Installing memory	55
	Replacing the system battery	57
<b>6</b>	<b>Troubleshooting</b>	<b>59</b>
	Safety guidelines	60
	First steps	60
	Troubleshooting	61
	Add-in cards	61
	Audio	61
	Battery	61
	CD or DVD drives	61
	Computer	63

Diskette drive	63
DVD drives	64
File management	64
Hard drive	65
Internet	66
Keyboard	67
Memory	68
Memory card reader	68
Modem (dial-up)	68
Monitor	72
Mouse	74
Networks	74
Passwords	74
Power	75
Printer	75
Sound	77
Telephone support	78
Before calling Gateway Customer Care	78
Telephone numbers	79
Self-help	80
Tutoring	80
Training	80
<b>7 Networking Your Computer</b>	<b>81</b>
Introduction to Networking	82
Using a router	82
Creating an Ethernet network	84
Installing Ethernet cards and drivers	84
Making sure your broadband connection works	85
Naming the computers and the workgroup	85
Configuring the TCP/IP protocol	86
Setting up an Ethernet network	88
Configuring your router	90
Testing your network	92
Troubleshooting Your Ethernet network	93
<b>A Safety, Regulatory, and Legal Information</b>	<b>95</b>
<b>Index</b>	<b>103</b>



# Chapter 1

## Getting Help

- Using the Gateway Web site
- Using Help and Support
- Using BigFix
- Using Your Computer guide
- Using online help
- Contacting Gateway

# Thank you for purchasing our computer!

You have made an excellent decision choosing Gateway. We are sure that you will be pleased with the outstanding quality, reliability, and performance of your new computer. Each and every Gateway computer uses the latest technology and passes through the most stringent quality control tests to ensure that you are provided with the best product possible.

Please read this manual carefully to familiarize yourself with our range of services and support. We have highlighted some basic care and safety information to help you keep your computer in good operating condition.


Gateway stands behind our value proposition to our customers — to provide best-of-class service and support in addition to high-quality, brand-name components at affordable prices. If you ever have a problem, our knowledgeable, dedicated customer service department will provide you with fast, considerate service.

We sincerely hope that you will receive the utmost satisfaction and enjoyment from your new Gateway computer for years to come.

Thanks again, from all of us at Gateway.

# Gateway Web site

Gateway's online support is available 24 hours per day, 7 days per week and provides the most current drivers, product specifications, tutorials, and personalized information about your computer. Visit the Gateway Support Web site at [support.gateway.com](http://support.gateway.com).

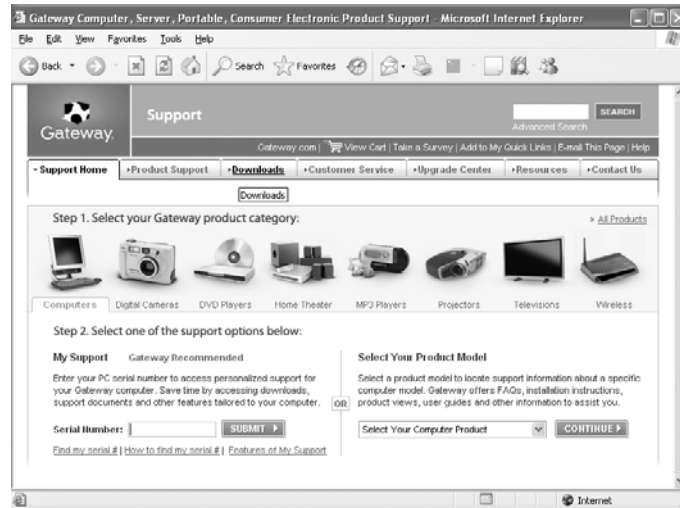

## Using Support

The Support site is divided into seven major areas:

- Support Home
- Product Support
- Downloads
- Customer Service
- Upgrade Center
- Resources
- Contact Us

## Support Home

Click **Support Home**, then click **Computers**. To view support documents for your computer, type your serial number in the **Serial Number** box, then click **Submit**.

Click the arrow button to open the **Select Your Computer Product** box, then click your model number to access product documentation, specifications, and guides for all Gateway computers.

## Product Support

Click **Product Support** to view a list of all the products that Gateway supports.

## Downloads

Click **Downloads** to get the latest software updates for BIOS and driver upgrades. By entering your serial number you get drivers specific to your computer. Click **Browse All Downloads** to walk through a step-by-step wizard to locate your drivers.

## Customer Service

Click **Customer Service** to view information about your account and general information about warranties and special offers.

## Upgrade Center

Click **Upgrade Center** to view and purchase upgrades for your computer.

## Resources

Click **Resources** to access utilities to help you manage your computer.

## Contact Us


Click **Contact Us** to access links to customer care with a live technician, including chat and e-mail. Click **Call Us** to get a list of Gateway telephone numbers for both sales and support. For more information, see “Telephone support” on page 78.

# Help and Support

Your computer includes *Help and Support*, an easily accessible collection of help information, troubleshooters, and automated support. Use Help and Support to answer questions about Windows and to help you quickly discover and use the many features of your Gateway computer.


▶ To start Help and Support:

- Click **Start**, then click **Help and Support**. Help and Support opens.

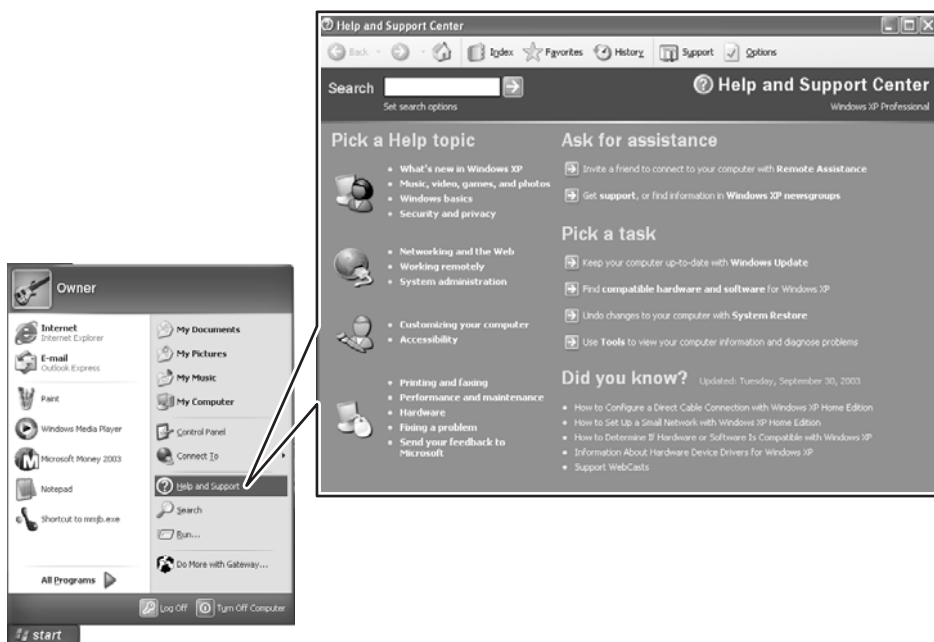

You can find help information by clicking a link, performing a search, or browsing the index.

## Searching for a topic

To search for a topic in Help and Support, type a word or phrase (keyword) in the **Search** box located at the top of any Help and Support screen, then click the arrow  button.

For each search, you receive the following search result types:

- **Suggested Topics** - These topics are located in Help and Support and are relevant to your search topic.
- **Full-text Search Matches** - These topics are located in Help and Support and contain the words you entered in the **Search** box.
- **Microsoft Knowledge Base** - These topics are located on the Microsoft Web site and contain the words you entered in the **Search** box. You must be connected to the Internet to search for and access these topics.

To view a list of your search results, click the results header for the type of results you want to view.

To view a topic, click the topic name in the **Search Results** list.

## BigFix

BigFix monitors your computer for problems and conflicts. It automatically gathers information about the latest bugs, security alerts, and updates from BigFix sites on the Internet. Whenever BigFix detects a problem, it alerts you by flashing the blue taskbar icon. To fix the problem, click on that icon to open BigFix.

 To start BigFix:

- Click **Start**, **All Programs**, **Accessories**, **System Tools**, then click **BigFix**.



 To learn more about using BigFix:

- From the BigFix program, click **Help**, then click **Tutorial**.



# Using Your Computer guide

In addition to this guide, the *Using Your Computer* guide has been included on your hard drive. This guide includes information on using Windows, using the Internet, sending a fax, and changing power-saving settings as well as other topics.


▶ To access the Using Your Computer guide:

- Click **Start**, **All Programs**, then click **Gateway Documentation**.




## Online help

Many programs provide information online so you can research a topic or learn how to perform a task while you are using the program. You can access most online help information by selecting a topic from a **Help** menu or by clicking a **Help** button.

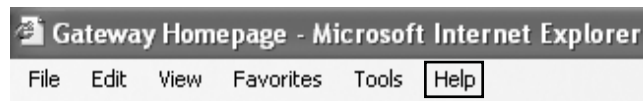


You can search for information by viewing the help contents, checking the index, searching for a topic or keyword, or browsing through the online help.

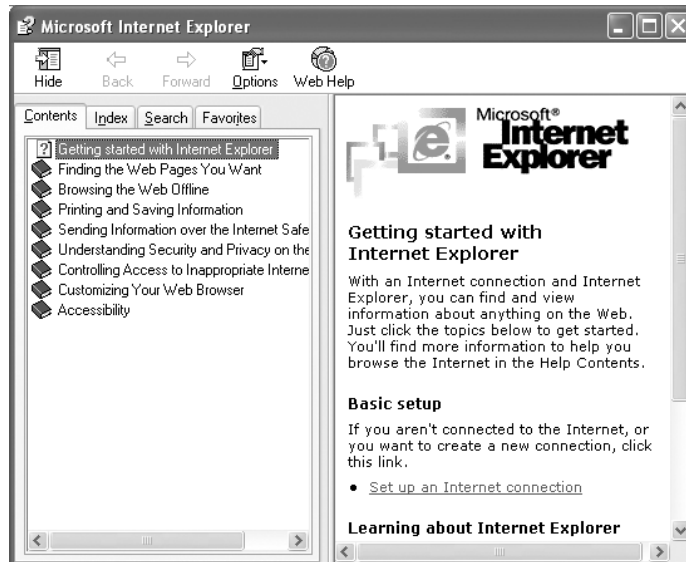

# Gateway contact information

To help you locate Gateway contact information, you can find the Gateway Web site, Online Support, and technical support contact information on the label located on the side of your computer case.

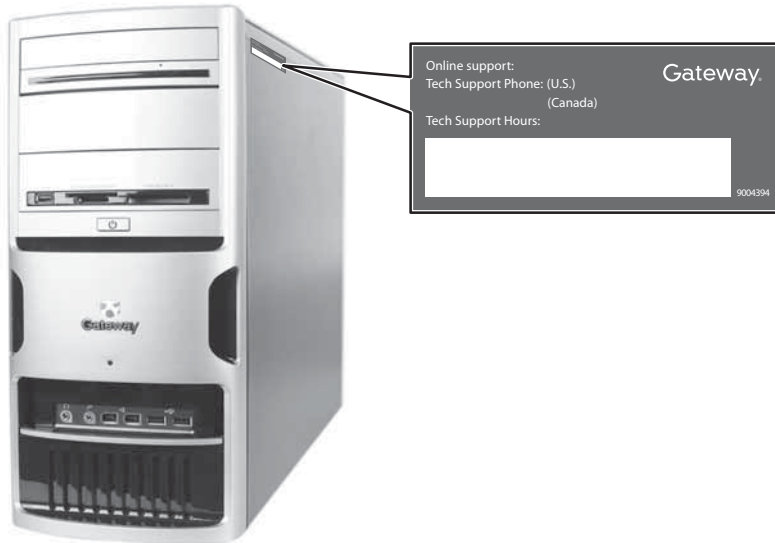

# Chapter 2

## Checking Out Your Gateway Computer

- Identifying features
- Locating your computer model and serial number
- Locating the Microsoft Certificate of Authenticity
- Locating the specifications for your computer
- Purchasing accessories


# Desktop PC Front






Your computer includes the following components.

**Important**

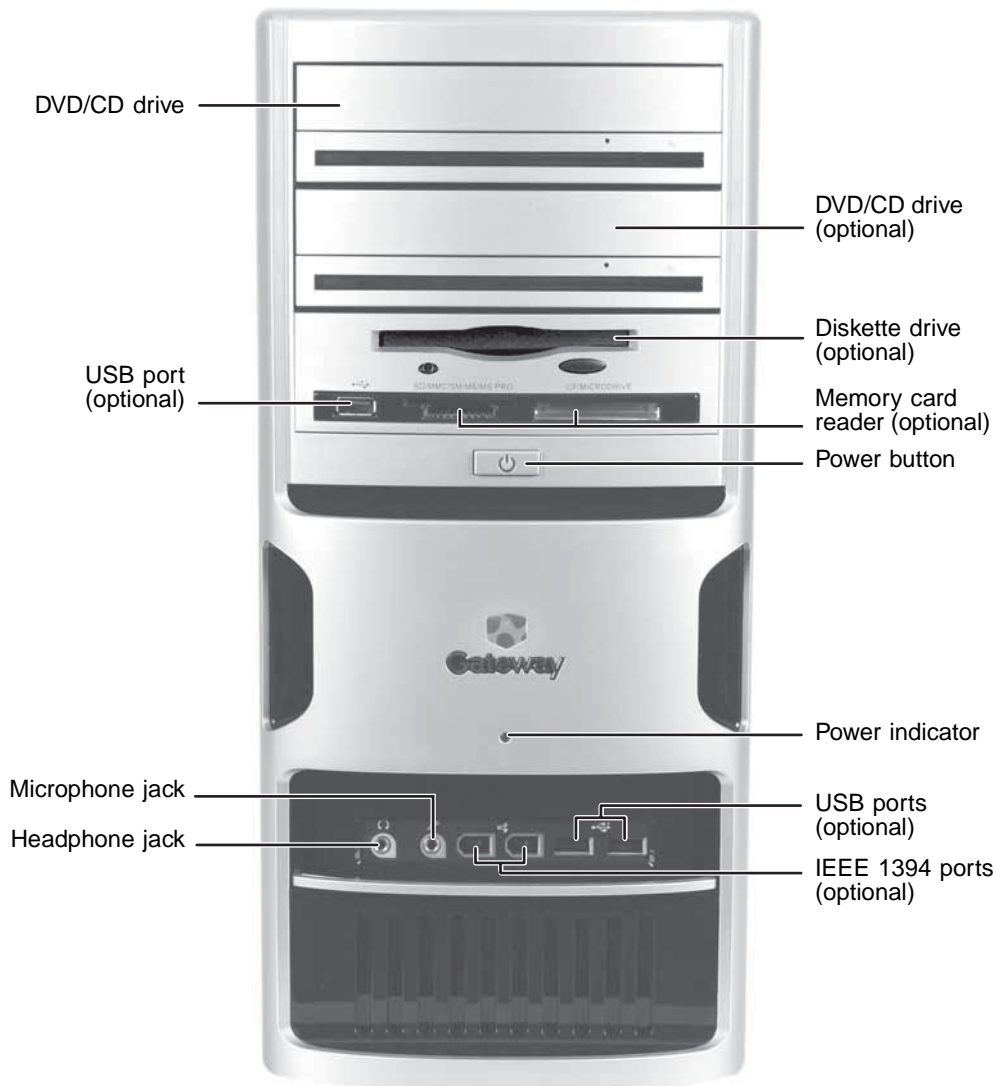

Your computer hardware options and port locations may vary from the illustration below.



Component	Icon	Description
DVD/CD drive		Use this drive to listen to audio CDs, install games and programs, watch DVDs, and store large files onto recordable discs (depending on drive type). This drive may be a CD, recordable CD, DVD, or recordable DVD drive. To identify your drive type and for more information about your drive, see “Identifying drive types” on page 37.
USB ports (optional)		Plug a USB (Universal Serial Bus) device (such as a USB Iomega™ Zip™ drive, printer, scanner, camera, keyboard, or mouse) into one of these ports. For more information, see “Installing a printer, scanner, or other peripheral device” on page 32.
Diskette drive (optional)		Insert a standard 3.5-inch diskette into the optional diskette drive.
Memory card reader (optional)		Insert a memory card from a digital camera, MP3 player, PDA, cellular telephone, or other devices into the memory card reader.
Power button		Press this button to turn the power on or off. You can also configure the power button to operate in Standby/Resume mode or Hibernate mode.
Power indicator		Lights when the computer is turned on.
IEEE 1394 ports (optional)		Plug IEEE 1394 (also known as Firewire® or i.Link®) devices (such as a digital camcorder) into these 6-pin IEEE 1394 ports. For more information, see “Installing a printer, scanner, or other peripheral device” on page 32.
Headphone jack		Plug powered, analog front speakers, an external amplifier, or headphones into this jack. This jack is color-coded orange.
Microphone jack		Plug a microphone into this jack. This jack is color-coded red or pink.


# Desktop PC Back







Your computer includes the following components.

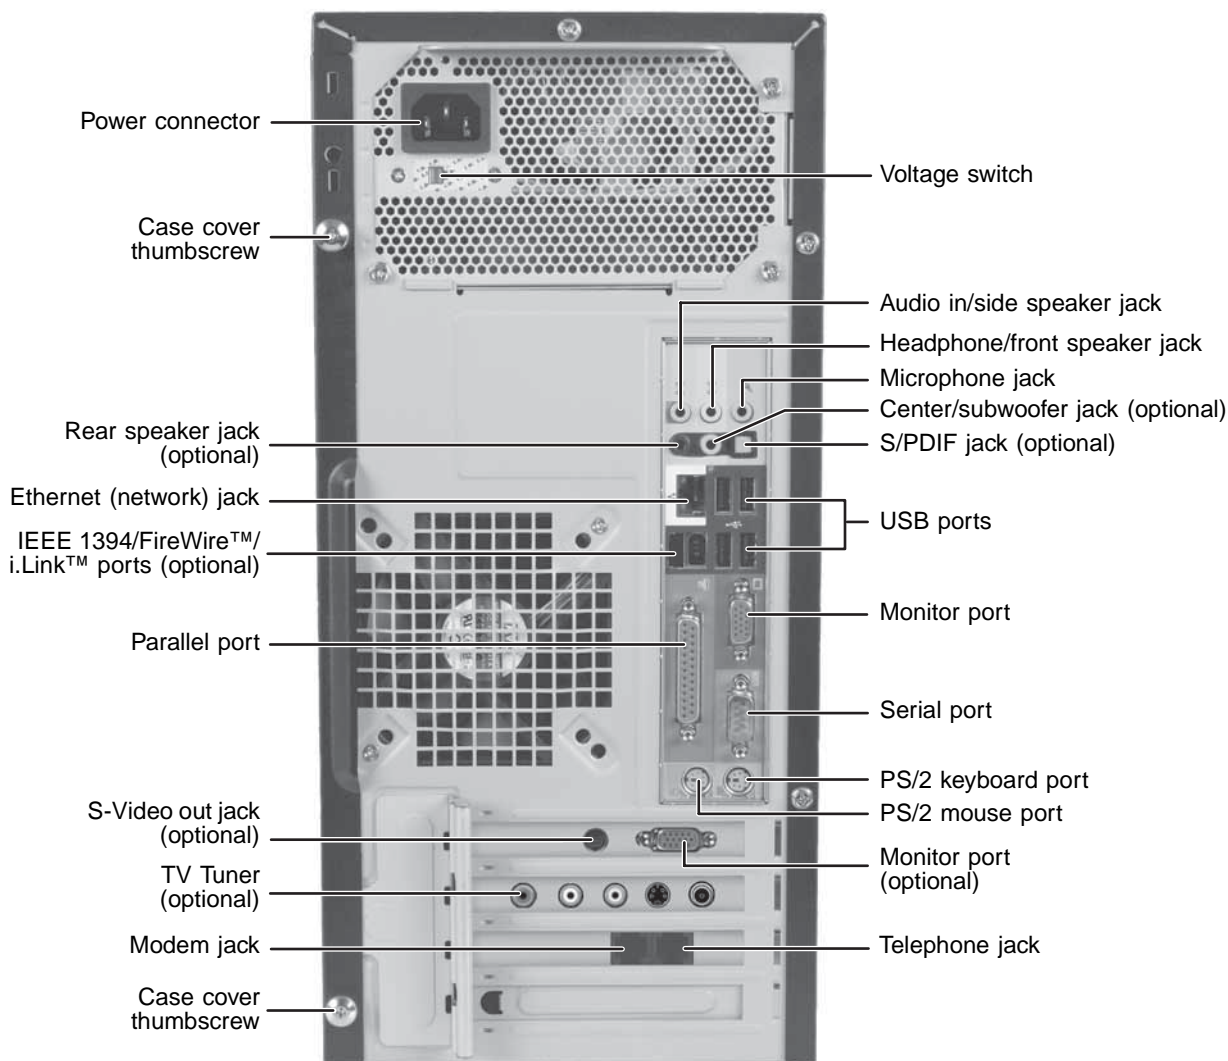








**Important**



Your computer hardware options and port locations may vary from the illustration below.



Component	Icon	Description
Power connector		Plug the power cord into this connector.
Case cover thumbscrews		Remove these screws before opening the case.
Rear speaker jack (black plug) (optional)		Plug your rear right and left speakers into this optional jack. For information on configuring this jack, see “Configuring the audio jacks” on page 30.
Ethernet (network) jack		Plug an Ethernet network cable or a device (such as a DSL or cable modem for a broadband Internet connection) into this jack. For more information, see “Learning about the Internet” in <i>Using Your Computer</i> which has been included on your hard drive. To access this guide, click <b>Start</b> , <b>All Programs</b> , then click <b>Gateway Documentation</b> .
IEEE 1394 ports		Plug IEEE 1394 (also known as Firewire® or i.Link®) devices (such as a digital camcorder) into these 6-pin IEEE 1394 ports. For more information, see “Installing a printer, scanner, or other peripheral device” on page 32.
Parallel port		Plug a parallel device (such as a printer) into this port. For more information, see “Installing a printer, scanner, or other peripheral device” on page 32.
S-Video (TV) out jack (optional)		Plug a standard S-Video cable into this optional jack. Plug the other end of the cable into an S-Video jack on a television.
Modem jack		Plug a modem cable into this jack.
Voltage switch		<p>Before turning on your computer, make sure that this switch is in the correct position for the correct power available. The switch is preset at the factory with the correct voltage for your area.</p> <p>In the United States, the utility power is supplied at a nominal 115 volts at 60 Hz. The power supply should always be set to this when your computer is operating in the United States. In other areas of the world, such as Europe, the utility power is supplied at 230 volts at 50 Hz. If your computer is operating in an environment such as this, the voltage switch should be moved to 230.</p>

Component	Icon	Description
Audio input (Line in) jack (blue plug) -OR- Side speaker jack		<p>If the back of your computer has five audio jacks, this jack is user configurable for one of the following:</p> <ul style="list-style-type: none"> <li>▪ <b>Stereo in:</b> plug an external audio input source (such as a stereo) into this jack so you can record sound on your computer (<b>Default</b>).</li> <li>▪ <b>Stereo out:</b> plug your side left and right speakers into this jack.</li> </ul> <p>For information on configuring this jack, see “Configuring the audio jacks” on page 30.</p> <p>If the back of your computer has three audio jacks, this jack is the audio input (line in) jack. Plug an external audio input source (such as a stereo) into this jack so you can record sound on your computer.</p>
Headphone/analog speakers jack (green plug) -OR- Front speakers jack		<p>If the back of your computer has five audio jacks, this jack is user configurable for one of the following:</p> <ul style="list-style-type: none"> <li>▪ <b>Headphone:</b> plug headphones or amplified speakers into this jack (<b>Default</b>).</li> <li>▪ <b>Stereo out:</b> plug your front left and right speakers into this jack.</li> </ul> <p>For information on configuring this jack, see “Configuring the audio jacks” on page 30.</p> <p>If the back of your computer has three audio jacks, this jack is the headphone/analog speaker (line out) jack. Plug powered speakers, an external amplifier, or headphones into this jack.</p>
Microphone jack (pink plug)		Plug a microphone into this jack.
Center/subwoofer jack (orange plug) (optional)		<p>Plug your center speaker and subwoofer into this optional jack.</p> <p>For information on configuring this jack, see “Configuring the audio jacks” on page 30.</p>
USB ports		Plug USB (Universal Serial Bus) devices (such as a USB Iomega™ Zip™ drive, printer, scanner, camera, keyboard, or mouse) into these ports. For more information, see “Installing a printer, scanner, or other peripheral device” on page 32.
Monitor port		Plug a monitor into this port.
Serial port		Plug a serial device (such as a digital camera) into this port. For more information, see “Installing a printer, scanner, or other peripheral device” on page 32.
PS/2 keyboard port		Plug a Personal System/2® (PS/2) keyboard into this port.
PS/2 mouse port		Plug a PS/2 mouse into this port.

# Identifying your model


## Important



The labels shown in this section are for informational purposes only. Label information varies by model, features ordered, and location.

## Gateway model and serial number

The label on the side of your computer case contains information that identifies your computer model and serial number. Gateway Technical Support will need this information if you call for assistance.

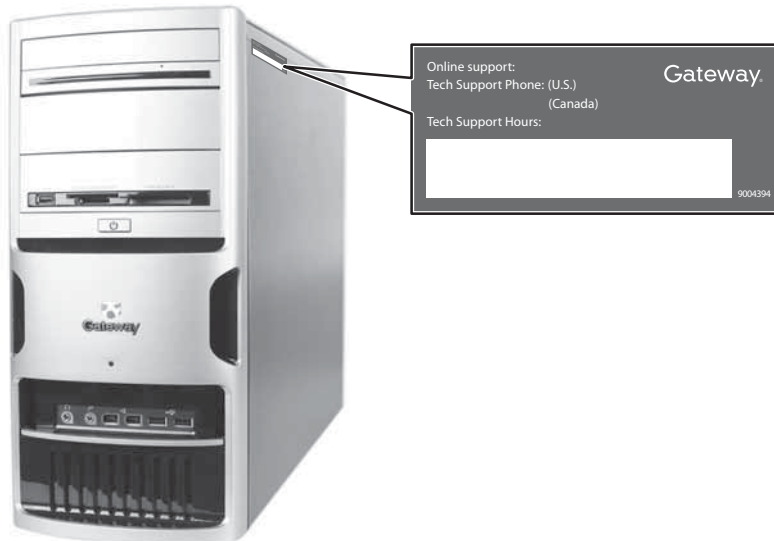


## Microsoft Certificate of Authenticity

The Microsoft Certificate of Authenticity label found on the back or side of your computer includes the product key code for your operating system.



# Finding your specifications

For more information about your computer, such as memory size, memory type, and hard drive size, visit Gateway's Support page at [support.gateway.com](http://support.gateway.com). The Support page also has links to additional Gateway documentation and detailed specifications. For more information, see "Using Support" on page 3.

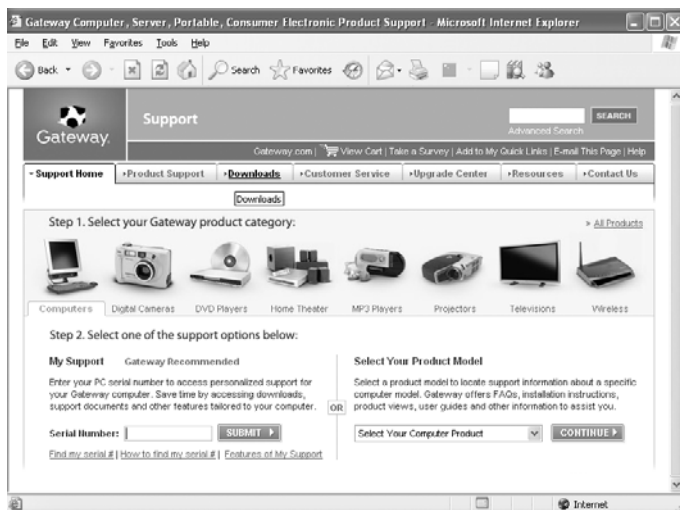

## Accessories

To order accessories, visit the Accessory Store at [accessories.gateway.com](http://accessories.gateway.com).

### Memory

Large programs, such as multimedia games or graphics programs, use a lot of memory. If your programs are running more slowly than you think they should, try adding more memory.

### Printers

You can attach almost any type of printer to your computer. The most common types are inkjet and laser printers, which print in color or black and white. See "Installing a printer, scanner, or other peripheral device" on page 32 for more information about attaching a printer.

Inkjet printers and cartridges are relatively inexpensive, but they are slower than laser printers. Using an inkjet color printer, you can print pictures, banners, and greeting cards, as well as documents.

Laser printers and cartridges are more expensive, but they print much faster than inkjet printers. Laser printers are better than inkjet printers when you are printing large documents.

### **Storage Devices**

If you need additional storage space or you want to back up your files, you can add storage devices to your computer.

With a recordable CD or DVD drive, you can free up hard drive space by backing up files, then removing them from your hard drive. Writable CDs can hold as much as 700 MB of data. Single layer writable DVDs can hold as much as 4700 MB of data. Dual layer writable DVDs hold as much as 8500 MB of data. For more information about using recordable drives, see “Creating CDs and DVDs” on page 39.

If you need to back up your entire system, you probably need a tape backup (TBU) drive. TBU drives, like tape recorders, use magnetic tape cartridges to store data. Tape drive cartridges can store 2 GB, 20 GB, 40 GB, 130 GB, or more of data.

If you want to increase your internal storage space, try replacing your existing hard drive with a larger drive.

### **USB flash drive**

Use a USB flash drive for storing files or transferring files to another computer.

### **Uninterruptible power supplies**

A standby, uninterruptible power supply (UPS) protects your computer from data loss during a total power failure. A UPS uses a battery to keep your computer running temporarily during a power failure so you can save your work and shut down your computer correctly. A UPS may also provide protection from power surges.




# Chapter 3

## Getting Started

- Using your computer safely
- Protecting your computer from power source problems
- Turning your computer on and off
- Adjusting the volume
- Using the keyboard and the mouse
- Installing peripheral devices

# Working safely

Before using your computer, read the following recommendations for setting up a safe and comfortable work area and avoiding discomfort and strain.

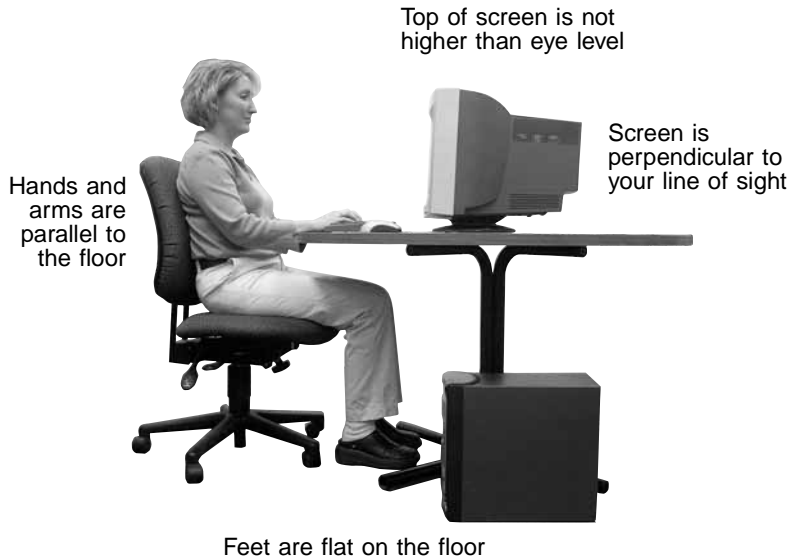

## Reducing eye strain

Sunlight or bright indoor lighting should not reflect on the monitor screen or shine directly into your eyes.

- Position the computer desk and monitor so you can avoid glare on your screen and light shining directly into your eyes. Reduce glare by installing shades or curtains on windows, and by installing a glare screen filter on your monitor.
- Use soft, indirect lighting in your work area. Do not use your computer in a dark room.
- Avoid focusing your eyes on your computer screen for long periods of time. Look away from your computer occasionally, and try to focus on distant objects.

## Setting up your computer desk and chair

When you are setting up your computer desk and chair, make sure that the desk is the appropriate height and the chair helps you maintain good posture.

- Select a flat surface for your computer desk.
- Adjust the height of the computer desk so your hands and arms are positioned parallel to the floor when you use the keyboard and mouse. If the desk is not adjustable or is too tall, consider using a keyboard drawer.
- Use an adjustable chair that is comfortable, distributes your weight evenly, and keeps your body relaxed.
- Position your chair so the keyboard is at or slightly below the level of your elbow. This position lets your shoulders relax while you type.
- Adjust the chair height, adjust the forward tilt of the seat, or use a footrest to distribute your weight evenly on the chair and relieve pressure on the back of your thighs.
- Adjust the back of the chair so it supports the lower curve of your spine. You can use a pillow or cushion to provide extra back support.

## **Setting up your computer and computer accessories**

- Set up the monitor so the top is no higher than eye level, the monitor controls are within reach, and the screen is tilted to be perpendicular to your line of sight.
- Place your keyboard and mouse at a comfortable distance. You should be able to reach them without stretching.
- Set paper holders at the same height and distance as the monitor.

## **Sitting at your computer**

- Avoid bending, arching, or angling your wrists. Make sure that they are in a relaxed position when you type.
- Do not slouch forward or lean far back. Sit with your back straight so your knees, hips, and elbows form right angles when you work.
- Take breaks to stand and stretch your legs.
- Avoid twisting your torso or neck.

## **Avoiding discomfort and injury from repetitive strain**

- Vary your activities to avoid excessive repetition.
- Take breaks to change your position, stretch your muscles, and relieve your eyes.
- Find ways to break up the work day, and schedule a variety of tasks.

## Protecting from power source problems

During a power surge, the voltage level of electricity coming into your computer can increase to far above normal levels and cause data loss or system damage. Protect your computer and peripheral devices by connecting them to a *surge protector*, which absorbs voltage surges and prevents them from reaching your computer.

### Warning



High voltages can enter your computer through both the power cord and the modem connection. Protect your computer by using a surge protector. If you have a telephone modem, use a surge protector that has a modem jack. If you have a cable modem, use a surge protector that has an antenna/cable TV jack. During an electrical storm, unplug both the surge protector and the modem.

An *uninterruptible power supply* (UPS) supplies battery power to your computer during a power failure. Although you cannot run your computer for an extended period of time with a UPS, a UPS lets you run your computer long enough to save your work and shut down your computer normally.

## Checking the voltage selection

A power supply is integrated into your computer to provide power to the system board, add-in cards, and peripheral devices. The voltage selection for your location is typically set at the factory. Use the power selection switch on the back of your computer to set the power supply to 115V or 230V. To verify that your system has the correct setting for your environment, check the voltage selection switch.

### Caution




If you set the voltage selection switch incorrectly, your system will be damaged. Make sure this switch is set correctly for your location before turning on your computer.

In the United States, the utility power is supplied at a nominal 115 volts at 60 Hz. The power supply should always be set to this when your computer is operating in the United States. In other areas of the world, such as Europe, the utility power is supplied at 230 volts at 50 Hz. If your computer is operating in an environment such as this, the voltage switch should be moved to 230.

▶ To set the voltage selection switch:

- Use a tool such as an opened paper clip to slide the voltage selection switch to the correct voltage position.

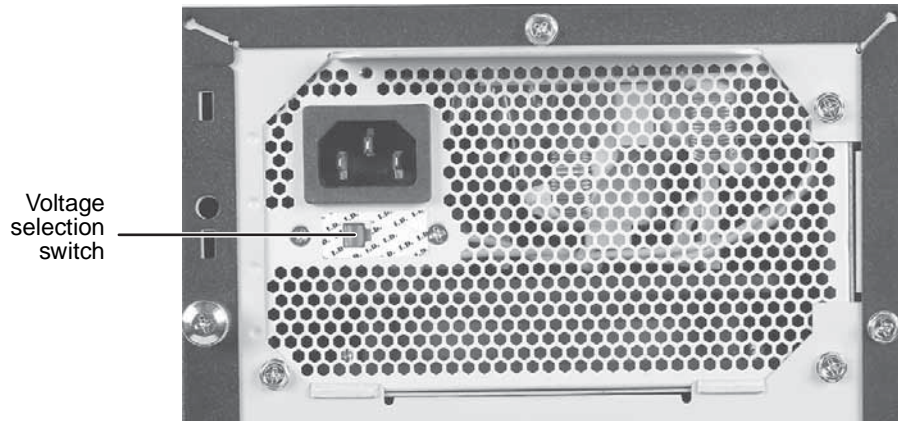

## Starting your computer

▶ To start your computer:

- 1 Connect the cables to your computer. See the setup poster.
- 2 Turn on your computer.
- 3 If you are starting your computer for the first time, follow the on-screen instructions to set up your computer.

**Important**



Your computer has a built-in variable speed fan. In addition, your computer uses a powerful processor which produces heat. Both the system fan and processor can run at different speeds at times to ensure proper system cooling. You may notice an increase in the fan noise when the fan is running at high speed and a decrease in the fan noise when it switches to normal speed.

- 4 Turn on any peripheral devices, such as printers or scanners, and see the documentation that came with the device for setup instructions.



## Waking up your computer

When you have not used your computer for several minutes or have not turned off your computer, it may enter a power-saving mode called *Standby*. While in Standby, the power indicator flashes.

If your computer is in Standby mode, move the mouse or press the power button to “wake” it up.

### Tips & Tricks



For more information about changing the power button mode, see “Changing Power-Saving Settings” in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

## Turning off your computer

### Warning



When you turn off your computer, certain components in the power supply and system board remain energized. In order to remove all electrical power from your computer, unplug the power cord and modem cable from the wall outlets. We recommend disconnecting the power cord and modem cable when your computer will not be used for long periods.



To turn off your computer:

- 1 Click **Start**, then click **Turn Off Computer**. The *Turn Off Computer* dialog box opens.
- 2 Click **Turn Off**. Windows shuts down and turns off your computer.

### Important



If for some reason you cannot use the Turn Off Computer option in Windows to turn off your computer, press and hold the power button for about five seconds, then release it.



# Restarting (rebooting) your computer

If your computer does not respond to keyboard or mouse input, you may have to close programs that are not responding. If closing unresponsive programs does not restore your computer to normal operation, you may have to restart (reboot) your computer.

 To close unresponsive programs and restart your computer:

- 1 Press **CTRL+ALT+DEL**. The *Task Manager* window opens.
- 2 Click the **Applications** tab, then click the program that is not responding.
- 3 Click **End Task**.
- 4 Click **X** in the top-right corner of the *Windows Task Manager* dialog box.
- 5 If your computer does not respond, turn it off, wait ten seconds, then turn it on again.

**Important**



If your computer does not turn off, press and hold the power button for about five seconds, then release it.

As a part of the regular startup process, a program to check the disk status runs automatically. When the checks are finished, Windows starts.





# Using the keyboard



## Keyboard features


The keyboard has several different types of keys and buttons. Your keyboard also has status indicators that show which keyboard feature is active.

Feature	Icon	Description
Editing buttons		Press these buttons to copy, cut, and paste.
Function keys		Press these keys to start program actions. Each program uses different function keys for different purposes. See the program documentation to find out more about the function key actions.
Internet buttons		Press these buttons to launch your Internet home page, search, or e-mail programs.
Audio playback buttons		Press these buttons to play your audio files and to adjust the volume.
Navigation keys		Press these keys to move the cursor to the beginning of a line, to the end of a line, up the page, down the page, to the beginning of a document, or to the end of a document.


Feature	Icon	Description
Indicators		Show if your <b>NUM LOCK</b> , <b>CAPS LOCK</b> , or <b>SCROLL LOCK</b> keys are activated. Press the corresponding key to activate the function.
Windows keys		Press one of these keys to open the Windows <b>Start</b> menu. These keys can also be used in combination with other keys to open utilities like <b>F</b> (Search utility), <b>R</b> (Run utility), and <b>E</b> (Explorer utility).
Application key		Press this key to access shortcut menus and help assistants in Windows.
Directional keys		Press these keys to move the cursor up, down, right, or left.
Numeric keypad		Press these keys to type numbers when the numeric keypad ( <b>NUM LOCK</b> ) is turned on.

# Using the mouse

The *mouse* is a device that controls the pointer movement on the computer display. This illustration shows the standard mouse.

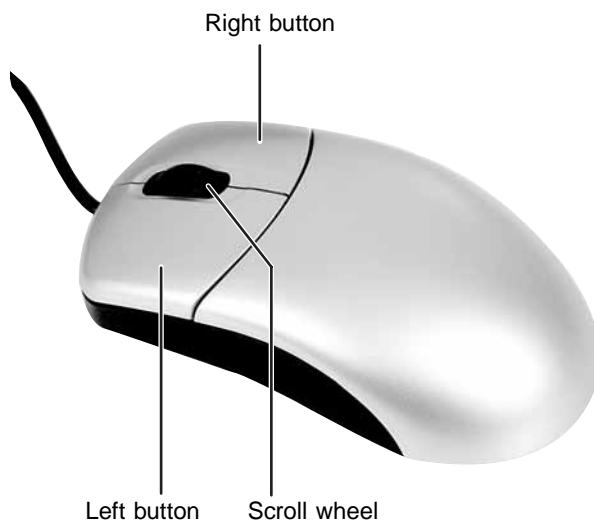


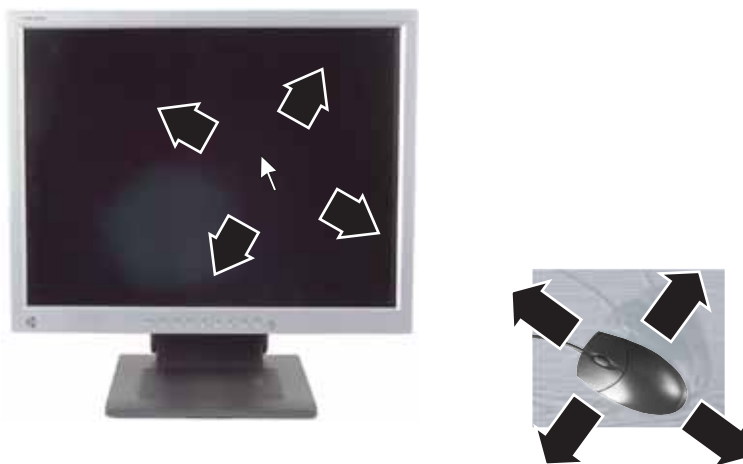



As you move the mouse, the *pointer* (arrow) on the display moves in the same direction.



You can use the *left* and *right buttons* on the mouse to select objects on the display.

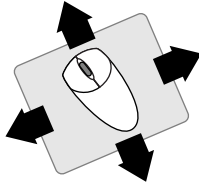You can use the *scroll wheel* on the mouse to move through a document. This feature is not available in all programs.

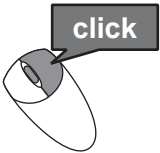To...	Do this...	
Move the pointer on the computer display		Move the mouse around on the mouse pad. If you run out of space on your mouse pad and need to move the pointer farther, pick up the mouse, set it down in the middle of the mouse pad, then continue moving the mouse.
Select an object on the computer display		Position the pointer over the object. Quickly press and release the left mouse button once. This action is called <i>clicking</i> .
Start a program or open a file or folder		Position the pointer over the object. Quickly press and release the left mouse button twice. This action is called <i>double-clicking</i> .
Access a shortcut menu or find more information about an object on the computer display.		Position the pointer over the object. Quickly press and release the right mouse button once. This action is called <i>right-clicking</i> .
Move an object on the computer display.		Position the pointer over the object. Press the left mouse button and hold it down. Move (drag) the object to the appropriate part of the computer display. Release the button to drop the object where you want it.

### Tips & Tricks



For more information about how to adjust the double-click speed, pointer speed, right-hand or left-hand configuration, and other mouse settings, see “Changing the mouse or touchpad settings” in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

For instructions on how to clean the mouse, see “Cleaning the mouse” on page 47.

# Adjusting the volume

You can use the volume controls to adjust the overall volume and the volume of specific sound devices in your computer.

▶ To adjust the overall volume level using hardware controls:

- If you are using external speakers, turn the knob on the front of the speakers.

-OR-

Use the mute and volume control buttons on the keyboard. For more information, see “Using the keyboard” on page 26.

## Tips & Tricks



For instructions on how to adjust the volume in Windows, see “Adjusting the Volume” in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.


# Configuring the audio jacks

If the back of your computer has five audio jacks, they are universal jacks. This means that they can be used for more than one purpose. For example, the blue jack on the computer can be a stereo in jack or a stereo out jack. For more information on how each jack can be used, see “Desktop PC Back” on page 12. To use the audio jacks for something other than the default audio device, you need to configure the audio jacks.

▶ To configure the audio jacks:

- 1 Connect your audio device(s) to the computer audio jack(s).
- 2 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Sounds, Speech, and Audio Devices**. Click/Double-click **Sounds and Audio Devices**, then click **Advanced** under Speaker Settings. The *Advanced Audio Properties* dialog box opens.

-OR-

If your computer has the Realtek Sound Effect Manager installed, double-click the Sound Effect Manager icon  on the taskbar. The *Realtek* dialog box opens.

- 3 Configure the audio jacks for your speaker setup.



# Connecting the dial-up modem


Your computer has a built-in 56K modem that you can use to connect to a standard telephone line.

## Warning



To reduce the risk of fire, use only No. 26 AWG or larger telecommunications line cord.

 To connect the modem:

- 1 Insert one end of the modem cable into the modem jack  on the back of your computer.
- 2 Insert the other end of the modem cable into a telephone wall jack. The modem will not work with digital or PBX telephone lines.
- 3 Start your computer, then start your communications program.



# Connecting to a cable or DSL modem or to a wired Ethernet network


Your computer has a network jack that you can use to connect to a cable or DSL modem or to a 10/100 wired Ethernet network.

## Important



Your computer is equipped with a built-in Ethernet port.  
For information about setting up a wired or wireless Ethernet network, see “Networking Your Computer” on page 81.

 To connect to a cable or DSL modem or to an Ethernet network:

- 1 Insert one end of the network cable into the network jack  on the back of your computer.
- 2 Insert the other end of the network cable into a network jack.



# Installing a printer, scanner, or other peripheral device

## Important



Before you install a printer, scanner, or other peripheral device, see the device documentation and installation instructions.


Your computer has one or more of the following ports: IEEE 1394 (also known as Firewire® or i.Link®), Universal Serial Bus (USB), serial, and parallel. You use these ports to connect peripheral devices such as printers, scanners, and digital cameras to your computer. For more information about port locations, see “Checking Out Your Gateway Computer” on page 9.

IEEE 1394 and USB ports support *plug-and-play* and *hot-swapping*, which means that your computer will usually recognize such a device whenever you plug it into the appropriate port. When you use an IEEE 1394 or USB device for the first time, your computer will prompt you to install any software the device needs. After doing this, you can disconnect and reconnect the device at any time.

Parallel and serial port devices are not plug-and-play. See the device documentation for detailed information and installation instructions.

## Help and Support



For more information about installing peripheral devices, click **Start**, then click **Help and Support**. Type the keyword **installing devices** in the **Search** box  , then click the arrow.


# Chapter 4

## Using Drives and Ports

- Using the diskette drive
- Using the memory card reader
- Using CD or DVD drives

# Using the diskette drive

The optional diskette drive uses 3.5-inch diskettes (sometimes called floppy disks). Diskettes are useful for storing files or transferring files to another computer.

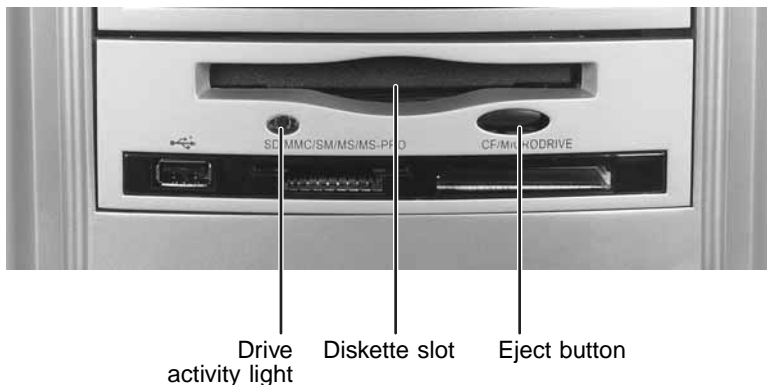


## ▶ To use a diskette:

- 1 Insert the diskette into the diskette drive with the label facing up.
- 2 To access a file on the diskette, click **Start**, then click **My Computer**. Double-click the diskette drive letter (for example, the A: drive), then double-click the file name.
- 3 To remove the diskette, make sure that the drive activity light is off, then press the diskette eject button.



# Using the memory card reader

You can use the optional memory card reader to transfer pictures from a digital camera to your computer. You can also use the memory card reader to transfer data between your computer and a device that uses memory cards, such as a PDA, MP3 player, or cellular telephone.

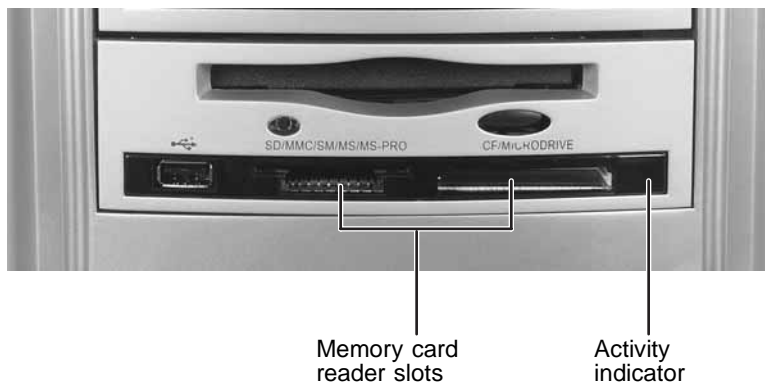

## Memory card types

The memory card reader supports the following card types:

Card Type	Slot	Insert
Secure Digital™	left	Label facing up
MultiMediaCard™	left	Label facing up
SM (SmartMedia™)	left	Label facing down (gold contact area facing up)
Memory Stick®	left	Label facing up
Memory Stick PRO™	left	Label facing up
CompactFlash®	right	Label facing up
IBM Microdrive™	right	Label facing up

Each slot is assigned a different drive letter (for example, the E: and F: drives) so data can be transferred from one memory card type to another.

## Inserting a memory card

### Caution



To avoid memory card damage or errors while using a memory card, insert only one memory card in a slot at a time.

### ▶ To use a memory card:

- 1 Insert the memory card into the memory card slot as indicated in the previous table.
- 2 To access a file on the memory card, click **Start**, then click **My Computer**. Double-click the drive letter (for example, the E: drive), then double-click the file name.



### ▶ To remove a memory card:

- Wait for the memory card reader access indicator to stop blinking, then pull the memory card out of the slot.


### Caution



Do not remove the memory card or turn off the computer while the memory card reader access indicator is blinking. You could lose data. Also, remove the memory card from the reader before you turn off the computer.

### Important



Do not use the remove hardware  icon in the taskbar to remove the memory card.





# Using the CD or DVD drive


You can use your computer to enjoy a wide variety of multimedia features.

## Identifying drive types

Your Gateway computer may contain one of the following drive types. Look on the front of the drive for one or more of the following logos:

If your drive has this logo...	This is your drive type...	Use your drive for...
	CD drive	Installing programs, playing audio CDs, and accessing data.
	CD-RW drive	Installing programs, playing audio CDs, accessing data, and creating CDs.
	DVD/CD-RW drive	Installing programs, playing audio CDs, accessing data, creating CDs, and playing DVDs.
	DVD drive	Installing programs, playing audio CDs, playing DVDs, and accessing data.
	DVD+RW	Installing programs, playing audio CDs, playing DVDs, accessing data, and recording video and data to CDs and DVD+R or DVD+RW discs.
	DVD R/RW drive	Installing programs, playing audio CDs, playing DVDs, accessing data, and recording video and data to CDs and DVD+R, DVD+RW, DVD-R, and DVD-RW discs.
	Double layer DVD+RW	<p>Installing programs, playing audio CDs, playing DVDs, accessing data, and recording video and data to CDs and double layer DVD+R discs.</p> <p><b>Note:</b> To use the double layer capability of the double layer recordable DVD drive, the blank DVDs you purchase must state Double Layer, Dual Layer, or DL. Using other types of blank media will result in less capacity.</p>

## Inserting a CD or DVD

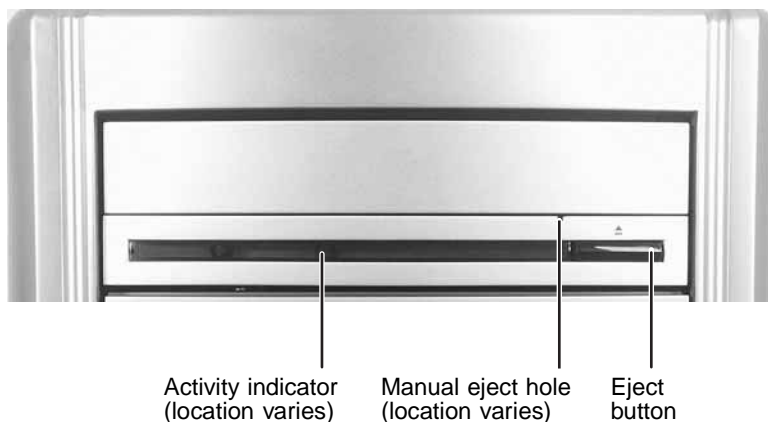

### Important



Some music CDs have copy protection software. You may not be able to play these CDs on your computer.

### ▶ To insert a CD or DVD:

- 1 Press the eject button on the CD or DVD drive.
- 2 Place the disc in the tray with the label facing up.

### Important



When you place a single-sided disc in the tray, make sure that the label side is facing up. If the disc has two playable sides, place the disc so the name of the side you want to play is facing up.

- 3 Press the eject button to close the tray.



# Playing a CD

Use the music program or Windows Media Player on your computer to:

- Play music CDs
- Create MP3 music files from your music CDs
- Edit music track information
- Use your music files to build a music library

## Tips & Tricks



For more information about playing CDs, see “Playing CDs” in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start, All Programs**, then click **Gateway Documentation**.

# Playing a DVD

A Digital Versatile Disc (DVD) is similar to a standard CD but has greater data capacity. Because of this increased capacity, full-length movies, several albums of music, or several gigabytes of data can fit on a single disc. You can play DVDs with the DVD program or Windows Media Player on your computer.

## Tips & Tricks



For more information about playing DVDs, see “Playing DVDs” in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start, All Programs**, then click **Gateway Documentation**.

# Creating CDs and DVDs

You can use the CD and DVD burning program on your computer to copy tracks from a music CD to your hard drive, copy or create data CDs and DVDs, create music CDs, create video DVDs, and more.

## Tips & Tricks



For more information about creating CDs and DVDs, see “Creating CDs and DVDs” in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start, All Programs**, then click **Gateway Documentation**.



# Chapter 5

## Maintaining Your Computer

- Caring for your computer
- Updating Windows
- Protecting your computer from viruses
- Cleaning your computer
- Restoring your system
- Opening the computer case
- Adding memory and replacing the battery

# Caring for your computer

To extend the life of your computer:

- When transporting your computer, we recommend that you put it in the original packaging materials.
- Keep diskettes and your computer away from magnetic fields. Magnetic fields can erase data on both diskettes and hard drives.
- Avoid subjecting your computer to extreme temperature changes.
- Keep all liquids away from your computer. When spilled onto computer components, almost any liquid can result in extremely expensive repairs that are not covered under your warranty.
- Avoid dusty or dirty work environments. Dust and dirt can clog the internal mechanisms.
- Do not block the ventilation fan.
- When storing your computer for an extended period of time, unplug AC power.

## Updating Windows

Windows Update is the online extension of Windows that helps you to keep your computer up-to-date. Use Windows Update to choose updates for your computer's operating system, software, and hardware. New content is added to the site regularly, so you can always get the most recent updates and fixes to protect your computer and keep it running smoothly. Windows Update scans your computer and provides you with a tailored selection of updates that apply only to the software and hardware on your computer.




To run Windows Update:

- 1 Connect to the Internet.
- 2 Click **Start**, **All Programs**, then click **Windows Update**.
- 3 Follow the on-screen instructions.



**Help and  
Support**



For more information about Windows Update, click **Start**, then click **Help and Support**. Type the keyword **Windows Update** in the HelpSpot **Search** box  , then click the arrow.

# Protecting your computer from viruses


A *virus* is a program that attaches itself to a file on a computer, then spreads from one computer to another. Viruses can damage data or cause your computer to malfunction. Some viruses go undetected for a period of time because they are activated on a certain date.

Protect your computer from a virus by:

- Registering your copy of Norton® Internet Security and subscribing to the virus definition update service. You received a free limited time subscription to the Norton Internet Security service when you purchased your computer.
- Using the Norton Internet Security program to check files and programs that are attached to e-mail messages or downloaded from the Internet.
- Checking all programs for viruses before installing them.
- Disabling macros on suspicious Microsoft Word and Excel files. These programs will warn you if a document that you are opening contains a macro that might have a virus.
- Periodically updating the Norton Internet Security program to protect against the latest viruses.
- Making sure the Windows Security Center is configured to provide you with the highest level of protection.


## Help and Support




For more information about protecting your computer against viruses, click **Start**, then click **Help and Support**. Type the keyword **viruses** in the **Search** box  , then click the arrow.

▶ To scan for viruses:


- 1 Click **Start, All Programs, Norton Internet Security**, then click **Norton Internet Security**. Norton Internet Security opens.

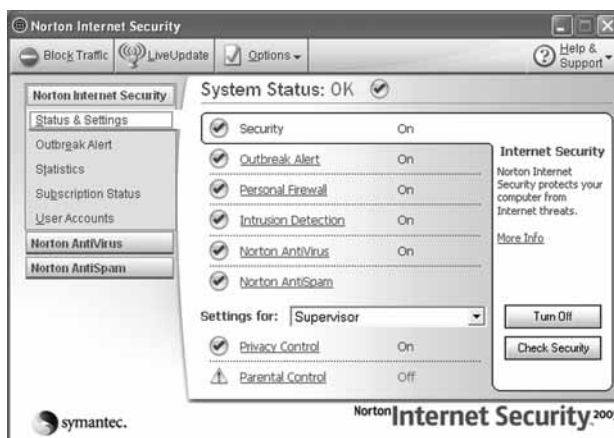

- 2 Click **Norton AntiVirus**.

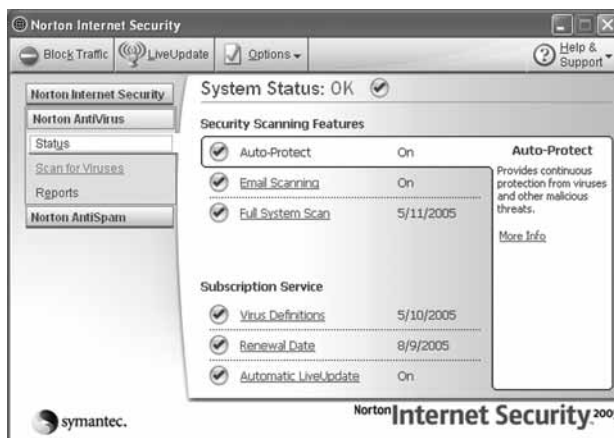

### 3 Click **Scan for Viruses**.

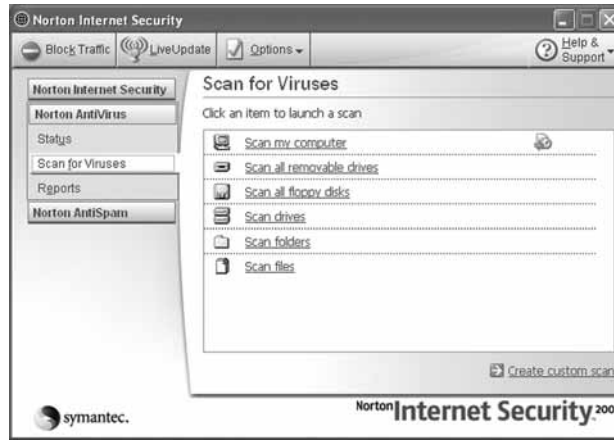

### 4 Click the type of scan you want to make in the Scan for Viruses area.



### ▶ To remove a virus:

- 1 If Norton Internet Security finds a virus, follow all on-screen instructions to remove the virus.
- 2 Turn off your computer and leave it off for at least 30 seconds.
- 3 Turn on your computer and rescan for the virus.



### ▶ To update Norton Internet Security:

#### Tips & Tricks



You received a free, limited-time subscription to the Norton Internet Security service when you purchased your computer. To update Norton Internet Security after the free subscription period, you must extend your subscription.

- 1 Make sure that you are connected to the Internet.
- 2 Click **Start, All Programs, Norton Internet Security**, then click **Norton Internet Security**. Norton Internet Security opens.
- 3 Click **LiveUpdate**. The LiveUpdate wizard opens.

- 4 Follow the on-screen instructions to update your Norton Internet Security program with the latest virus protection files.
- 5 When the program has finished, click **Finish**.



## Cleaning your computer

Keeping your computer clean and the vents free from dust helps keep your computer performing at its best. You may want to gather these items and put together a computer cleaning kit:

- A soft, lint-free cloth
- An aerosol can of air that has a narrow, straw-like extension
- Cotton swabs
- A CD or DVD drive cleaning kit

## Cleaning the exterior

### Warning



When you shut down your computer, the power turns off, but some electrical current still flows through your computer. To avoid possible injury from electrical shock, unplug the power cord and modem cable from the wall outlets.

Always turn off your computer and other peripherals before cleaning any components.

Use a damp, lint-free cloth to clean your computer and other parts of your system. Do not use abrasive or solvent cleaners because they can damage the finish on components.

Your computer is cooled by air circulated through the vents on the case, so keep the vents free of dust. With your computer turned off and unplugged, brush the dust away from the vents with a damp cloth. Be careful not to drip any water into the vents. Do not attempt to clean dust from the inside of your computer.

## Cleaning the keyboard

You should clean the keyboard occasionally by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.

If you spill liquid on the keyboard, turn off your computer and turn the keyboard upside down. Let the liquid drain, then let the keyboard dry before trying to use it again. If the keyboard does not work after it dries, you may need to replace it.

## Cleaning the computer display

To clean a computer LCD screen or flat panel display, use a soft cloth and water to clean the LCD screen. Squirt a little water on the cloth (never directly on the screen), and wipe the screen with the cloth.

### Caution



A flat panel display or computer LCD screen is made of specially coated glass and can be scratched or damaged by abrasive or ammonia-based glass cleaners.

To clean a CRT monitor, use a soft cloth and glass cleaner to clean the monitor screen. Squirt a little cleaner on the cloth (never directly on the screen), and wipe the screen with the cloth.

## Cleaning the mouse

If the mouse pointer begins moving erratically across the computer screen or becomes difficult to control precisely, cleaning the mouse will likely improve its accuracy.

▶ To clean your mouse:

- Wipe the bottom of the mouse with a damp lint-free cloth



## Cleaning CDs or DVDs

Wipe from the center to the edge, not around in a circle, using a product made especially for the purpose.



# Restoring your system

## Microsoft System Restore

If your computer is not working correctly after you install a program or change a setting in the Control Panel, you may need to use Microsoft System Restore to restore the computer to an earlier configuration.


▶ To run Microsoft System Restore:

- 1 Click **Start**, **All Programs**, **Accessories**, **System Tools**, then click **System Restore**.
- 2 Follow the on-screen instructions.



Help and Support



For more information about System Restore, click **Start**, then click **Help and Support**. Type the keyword **System Restore** in the HelpSpot **Search** box  , then click the arrow.

## Reinstalling programs and drivers

If a program or device on your computer is not working correctly, you may need to reinstall your program or driver.

▶ To reinstall your program or driver:

- 1 Click **Start**, **All Programs**, **System Recovery**, then click **Application & Driver Recovery**.
- 2 Follow the on-screen instructions.



# Restoring your computer to the original configuration

If Windows does not start or if the two previous procedures do not correct the problem, you may need to restore your computer to the original configuration.

 To restore your computer to the original configuration:

- 1 Turn on your computer, then press **F11**.
- 2 Follow the on-screen instructions.



# Preventing static electricity discharge

The components inside your computer are extremely sensitive to static electricity, also known as *electrostatic discharge* (ESD).

## Warning



To avoid exposure to dangerous electrical voltages and moving parts, turn off your computer and unplug the power cord and modem and network cables before opening the case.

## Caution



ESD can permanently damage electrostatic discharge-sensitive components in your computer. Prevent ESD damage by following ESD guidelines every time you open the computer case.

Before opening the computer case, follow these guidelines:

- Turn off your computer.
- Wear a grounding wrist strap (available at most electronics stores) and attach it to a bare metal part of your computer.

## Warning



To prevent risk of electric shock, do not insert any object into the vent holes of the power supply.

- Touch a bare metal surface on the back of the computer.
- Unplug the power cord and the modem and network cables.

Before working with computer components, follow these guidelines:

- Avoid static-causing surfaces such as carpeted floors, plastic, and packing foam.
- Remove components from their antistatic bags only when you are ready to use them. Do not lay components on the outside of antistatic bags because only the inside of the bags provide electrostatic protection.
- Always hold expansion cards by their edges or their metal mounting brackets. Avoid touching the edge connectors and components on the cards. Never slide expansion cards or components over any surface.

# Opening the case

Your computer case provides easy access to internal components.


**Warning**

To avoid exposure to dangerous electrical voltages and moving parts, turn off your computer, then unplug the power cord, modem cable, and network cable before opening the case.

## Removing the side panel

 To remove the side panel:


- 1 Follow the instructions in “Preventing static electricity discharge” on page 50.
- 2 Shut down your computer, then disconnect the power cord and modem, network, and all peripheral device cables.
- 3 Press the power button to drain any residual power from your computer.
- 4 Remove the two thumbscrews from the side panel, then swing the back of the side panel away from the computer.

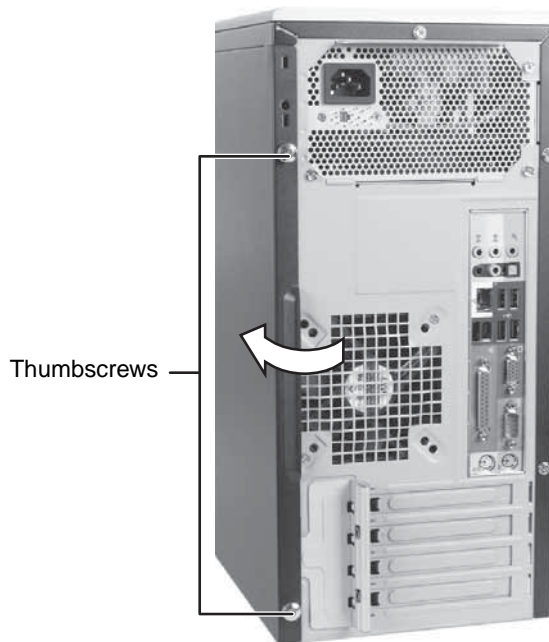

## Removing the front bezel

▶ To remove the front bezel:

- 1 Remove the side panel.
- 2 Press on the three spring tabs while pulling the right side of the bezel away from the computer, then swing the bezel toward the left and remove it from the computer.

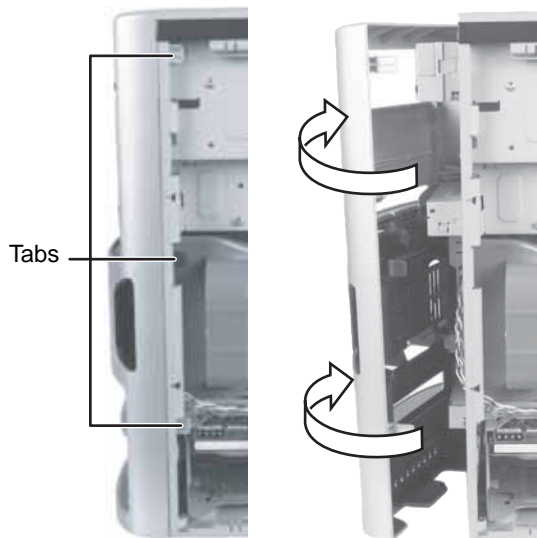

# Closing the case

## Replacing the side panel



To replace the side panel:


- 1** Make sure that all of the internal cables are arranged inside the case so they will not be pinched when you close the case.
- 2** Align the panel tabs into the front case notches, then swing the side panel toward the back of the computer to secure it into place.
- 3** Replace the two side panel thumbscrews.
- 4** Reconnect the cables and power cord.



## Replacing the front bezel

▶ To replace the front bezel:

- Align the tabs in the left side of the bezel with the notches in the left side of the case, then press the right side of the bezel against the case until it clicks into place.

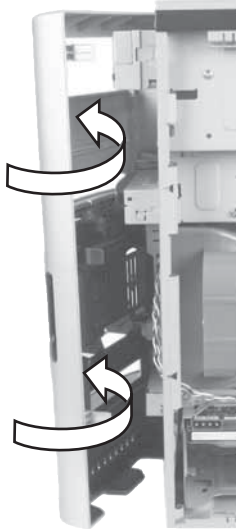


# Installing memory

When you upgrade the computer memory, make sure that you install the correct type of memory module for your computer. Your computer uses DIMM memory.

## To install or replace DIMM memory:

- 1** Remove the side panel by following the instructions in “Removing the side panel” on page 51.
- 2** For more stability, place your computer on its side. To avoid scratching the case, place it on a towel or other non-abrasive surface.
- 3** Find the memory module banks on your system board.

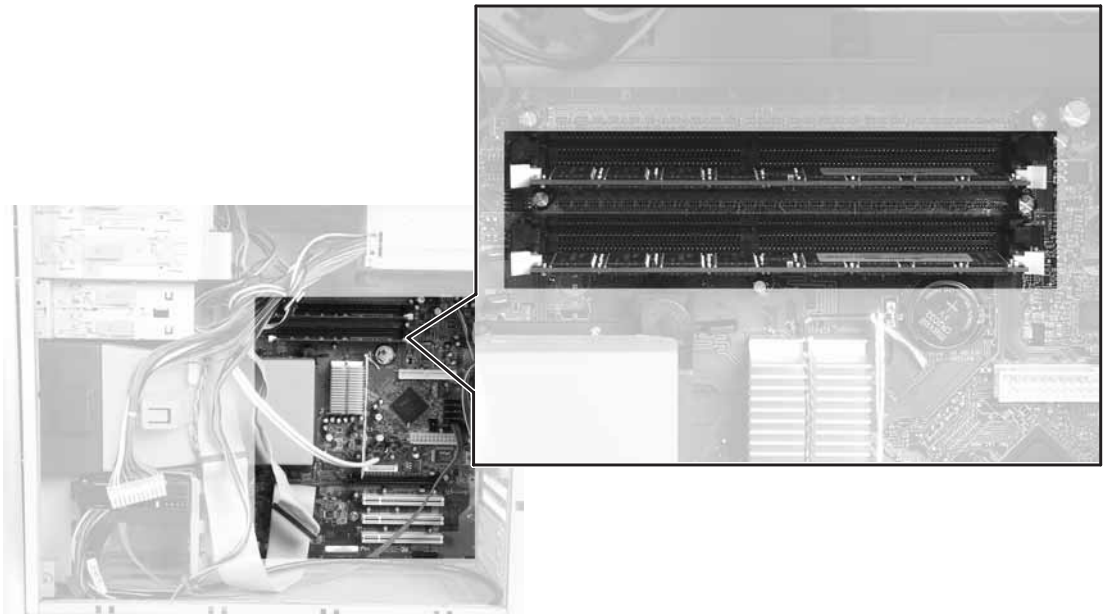

- 4** If you are removing a DIMM from the memory module bank, gently pull the plastic tabs away from the sides of the memory module and remove it.

- OR -

If you are adding a DIMM to an empty memory module bank, gently pull the plastic tabs away from the sides of the memory module bank.

- 5 Align the notches on the new DIMM with the notches on the memory module bank and press the module firmly into the bank. The tabs on the sides of the memory module should secure the memory module automatically. When the module is secure, you hear a click.
- 6 Replace the side panel by following the instructions in “Replacing the side panel” on page 53.
- 7 Return your computer to its upright position.
- 8 Reconnect the cables and the power cord.
- 9 Turn on your computer. Windows starts and the Windows desktop appears.
- 10 Click **Start**, **Control Panel**, then click **Performance and Maintenance** (if in Category view). Click/Double-click **System**. The amount of memory in your computer is shown at the bottom of the *System Properties* dialog box in the General tab.



# Replacing the system battery

If the computer clock does not keep time or the settings in the BIOS Setup utility are not saved when you turn off your computer, replace the system battery. Use a battery of the same size and voltage as the original battery that was in your computer.

**Warning**

Danger of explosion if battery is incorrectly replaced.


Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries following the manufacturer's instructions.



To replace the battery:

- 1 Restart your computer.
- 2 During the restart, press and hold the **F1** key. The main menu of the BIOS Setup utility opens.
- 3 Write down all the values in the menus and submenus, then exit from the utility.
- 4 Shut down your computer.
- 5 Remove the side panel by following the instructions in “Removing the side panel” on page 51.
- 6 For more stability, place your computer on its side. To avoid scratching the case, place it on a towel or other non-abrasive surface.
- 7 Locate the old battery on the system board and note its orientation. You will need to install the new battery the same way.

- 8** Push the battery release tab. The battery pops out of the socket.

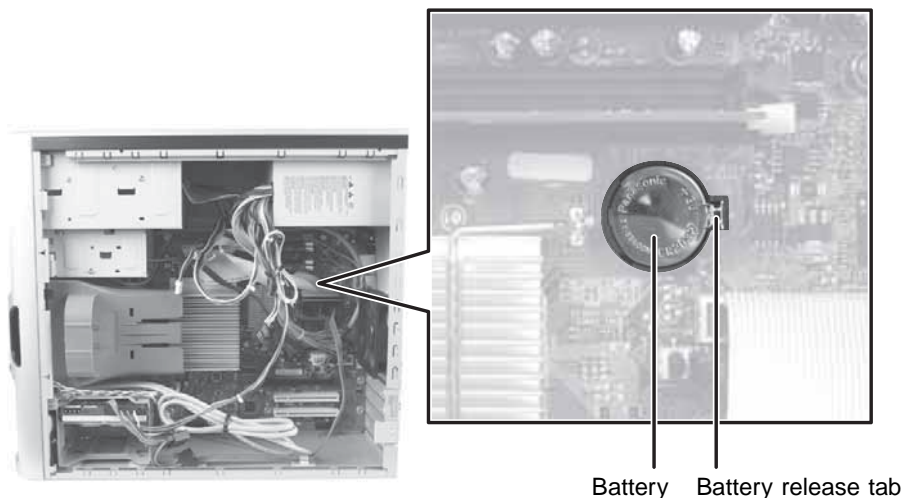

- 9** Make sure that the positive (+) side of the new battery is facing up, then press the battery into the socket until it snaps into place.
- 10** Replace the side panel by following the instructions in “Replacing the side panel” on page 53.
- 11** Reconnect all external cables and the power cord.
- 12** Turn on your computer, then press **F1** to open the BIOS Setup utility.
- 13** In the BIOS Setup utility, restore any settings that you wrote down in Step 3.
- 14** Save all your settings and exit the BIOS Setup utility.



# Chapter 6

## Troubleshooting

- Troubleshooting typical hardware and software problems
- Getting telephone support
- Using automated troubleshooting systems
- Getting tutoring and training

# Safety guidelines

While troubleshooting your computer, follow these safety guidelines:

- Never remove your computer case cover while your computer is turned on and while the modem cable, network cable, and power cord are connected.
- Make sure that you are correctly grounded before accessing internal components. For more information about preventing damage from static electricity, see “Preventing static electricity discharge” on page 50.

## Warning



To avoid bodily injury, do not attempt to troubleshoot your computer problem if:

- Power cords or plugs are damaged
- Liquid has been spilled into your computer
- Your computer was dropped
- The case was damaged

Instead, unplug your computer and contact a qualified computer technician.


## First steps

If you have problems with your computer, try these things first:

- Make sure that the AC power adapter is connected to your computer and an AC outlet and that the AC outlet is supplying power.
- If you use a power strip or surge protector, make sure that it is turned on.
- If a peripheral device (such as a keyboard or mouse) does not work, make sure that all connections are secure.
- Make sure that your hard drive is not full.
- If an error message appears on the screen, write down the exact message. The message may help Gateway Customer Care in diagnosing and fixing the problem.
- If you added or removed peripheral devices, review the installation procedures you performed and make sure that you followed each instruction.
- If an error occurs in a program, see the program's printed documentation or the online help.

## Help and Support



For more information about troubleshooting, click **Start**, then click **Help and Support**. Type the keyword **troubleshooting** in the **Search** box  , then click the arrow.

# Troubleshooting

Troubleshooting topics are listed in alphabetical order.

## Add-in cards

**The computer does not recognize an add-in card**

- Shut down and restart your computer.
- Make sure that you have installed the required software. For more information, see the documentation that came with your add-in card.

## Audio

See “Sound” on page 77.

## Battery

See “Power” on page 75.

## CD or DVD drives

**The computer does not recognize a disc or the CD or DVD drive**

- Make sure that the disc label is facing up, then try again.
- Try a different disc. Occasionally discs are flawed or become scratched and cannot be read by the CD or DVD drive.
- If you are trying to play a DVD, make sure that you have a DVD drive. To identify your drive type, see “Identifying drive types” on page 37.
- Your computer may be experiencing some temporary memory problems. Shut down and restart your computer.
- Some music CDs have copy protection software. You may not be able to play these CDs on your computer.
- Clean the disc. For more information, see “Cleaning CDs or DVDs” on page 47.
- Restart your computer, then enter the BIOS Setup utility by pressing and holding **F1** while your computer restarts. Make sure that the IDE controllers are enabled.
- Make sure that the drive is configured correctly by following the instructions in the drive documentation.
- Reinstall the device driver.

### Audio CD does not produce sound

- Make sure that the disc label is facing up, then try again.
- Some music CDs have copy protection software. You may not be able to play these CDs on your computer.
- Make sure that the volume controls are turned up. For more information, see “Adjusting the volume” on page 30.
- Make sure that the mute controls are turned off. For more information, see “Adjusting the volume” on page 30.
- Make sure that the speaker cables are connected correctly and securely.
- Shut down and restart your computer.
- Clean the disc. For more information, see “Cleaning CDs or DVDs” on page 47.
- Reinstall the audio device drivers.

### A DVD movie will not play

- Make sure that you have a DVD drive. To identify your drive type, see “Identifying drive types” on page 37.
- Make sure that the disc label is facing up, then try again.
- Try a different disc. Occasionally discs are flawed or become scratched and cannot be read by the DVD drive.
- Shut down and restart your computer.
- Clean the disc. For more information, see “Cleaning CDs or DVDs” on page 47.
- Reinstall the device driver.
- Make sure that the DVD program has been installed on your computer.
- DVDs and DVD drives contain *regional codes* that help control DVD title exports and help reduce illegal disc distribution. To be able to play a DVD, the disc’s regional code and your DVD drive’s regional code must match.

The regional code on your DVD drive is determined by your computer’s delivery address. The regional code for the United States and Canada is 1. The regional code for Mexico is 4. Your DVD drive’s regional code must match the regional code for the disc. The regional code for the disc is on the disc, disc documentation, or disc packaging.

If the DVD movie does not play, the disc’s regional code and your DVD drive’s regional code may not match.

# Computer

## The computer will not start

- Make sure that the power cord is connected to an AC power source and your computer is turned on.

# Diskette drive

## The diskette drive is not recognized

- Shut down and restart your computer.

## You cannot save a file to diskette or you see the message “disk is full or write-protected”

- Make sure that the write-protection tab on the upper-right corner of the diskette is down (unprotected).
- Delete unnecessary files on the diskette and try again.
- Make sure that the diskette you are using is IBM-compatible.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.
- Run Error-checking on the diskette. For more information, see “Checking the hard drive for errors” in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

If errors are detected and corrected, try using the diskette again.

## You see a “Access Denied” or “Write protect” error message

- Move the write-protection tab in the upper-right corner of the diskette down (unprotected).
- The diskette may be full. Delete unnecessary files on the diskette and try again.
- Make sure that the diskette you are using is IBM-compatible.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.

**You see a “Disk is full” error message**

- Delete unnecessary files on the diskette.
- Try a different diskette. Occasionally diskettes are flawed and cannot be read by the diskette drive.
- Run Error checking on the diskette. For more information, see “Checking the hard drive for errors” in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

**You see a “Non-system disk” or “Disk error” error message**

- Eject the diskette from the diskette drive, then press **ENTER**.
- Make sure that the diskette you are using is IBM-compatible.

**The diskette drive LED is lit continuously**

- Remove the diskette from the drive. If the light stays on, try restarting your computer.

## DVD drives

See “CD or DVD drives” on page 61.

## File management

**A file was accidentally deleted**

If a file was deleted at a DOS prompt or in Windows while holding down the **SHIFT** key, the file cannot be restored.



To restore deleted files:


- 1 Double-click the **Recycle Bin** icon.
- 2 Right-click the file you want to restore, then click **Restore**. The file is restored to the place where it was originally deleted from.

If the Recycle Bin was emptied before you try to restore a file, the file cannot be restored.



## Help and Support



For more information about restoring deleted files, click **Start**, then click **Help and Support**. Type the keyword **System Restore** in the Search box Search  , then click the arrow.

# Hard drive

## You see an “Insufficient disk space” error message

- Delete unnecessary files from the hard drive using Disk Cleanup. For instructions on deleting unnecessary files, see “Using Disk Cleanup” in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.
- Empty the Recycle Bin by right-clicking the **Recycle Bin** icon, then clicking **Empty Recycle Bin**.

### Caution




All deleted files will be lost when you empty the Recycle Bin.

- Save your files to another drive. If the hard drive is full, copy any files not regularly used to backup media, then delete them from the hard drive.

## Help and Support



For more information about file management, click **Start**, then click **Help and Support**. Type the keyword **file management** in the Search box Search  , then click the arrow.

## You see a “Data error” message

This may be the result of a defective area on the hard drive. To fix hard drive problems, run the Error checking program. For instructions on fixing hard drive problems, see “Checking the hard drive for errors” in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

## The hard drive cannot be accessed, or you see a “General failure reading drive C” error message

- If a diskette is in the diskette drive, eject it and restart your computer.
- Press **CTRL+ALT+DEL** to restart your computer.
- If your computer has been subjected to static electricity or physical shock, you may need to reinstall the operating system.

### You see a “Non-system disk” or “disk error” error message

- Eject the diskette from the diskette drive, then press **ENTER**.

## Internet

See also “Modem (dial-up)” on page 68.

### You cannot connect to the Internet

- If you are using a dial-up modem, make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. See “Desktop PC Back” on page 12 to make sure that the connections have been made correctly.

- OR -


If you are using a cable or DSL modem, make sure that the modem cable is plugged into the Ethernet network jack and not the modem jack. See “Desktop PC Back” on page 12 to make sure that the connections have been made correctly.

- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP technical support for help.
- Make sure that you do not have a problem with your modem. For more information, “Modem (dial-up)” on page 68.

#### Help and Support



For more information about troubleshooting Internet connections, click **Start**, then click **Help and Support**. Type the keyword **troubleshooting connections** in the **Search** box

Search  , then click the arrow.

### You see an “Unable to locate host” message and are unable to browse the Internet

This problem can occur when you have typed a URL (Web address) incorrectly, you have lost your Internet connection, or your ISP is having technical difficulties.

Double-check the URL or try a different URL. If the error message still appears, disconnect from the ISP connection and close your browser, then reconnect and open the browser. If you still get the error, your ISP may be having technical difficulties.

### Connecting to a Web site takes too long

Many factors can affect Internet performance:

- The condition of the telephone lines in your residence or at your local telephone service
- The condition of the Internet computers to which you connect and the number of users accessing those computers
- The complexity of graphics and multimedia on Web pages
- Having multiple Web browsers open, performing multiple downloads, and having multiple programs open on your computer

**People are sending you e-mail messages, but you have not received any mail**

- Click the receive button in your e-mail program.
- Make sure that your account with your Internet service provider (ISP) is set up correctly. Contact your ISP for technical support.

## Keyboard

**The keyboard does not work**

- Make sure that the keyboard cable is plugged in correctly. For more information, see the poster that came with your computer.
- Remove all extension cables and switch boxes.
- Clean the keyboard by using an aerosol can of air with a narrow, straw-like extension to remove dust and lint trapped under the keys.
- Try a keyboard that you know works to make sure that the keyboard port works.
- Reinstall the keyboard device driver.

**A keyboard character keeps repeating or you see a “keyboard stuck” or “key failure” error message**

- Make sure that nothing is resting on the keyboard.
- Make sure that a key is not stuck. Press each key to loosen a key that might be stuck, then restart your computer.

**Liquid spilled in the keyboard**

If you spilled liquid in the keyboard, turn off your computer and unplug the keyboard. Clean the keyboard and turn it upside down to drain it. Let the keyboard dry before using it again. If the keyboard does not work after it dries, you may need to replace it.

# Memory

You see a “Memory error” message


- Use a third-party diagnostic program to help determine if a memory module is failing.

You see a “Not enough memory” error message

Close all programs, then restart your computer.

**Help and  
Support**



For more information about troubleshooting memory errors, click **Start**, then click **Help and Support**. Type the keyword **memory error** in the **Search** box  , then click the arrow.

## Memory card reader

Drive letters for the memory card slots do not appear in the My Computer window

- Reboot your computer.

## Modem (dial-up)

See also “Internet” on page 66.

## Your modem does not dial or does not connect

- Make sure that the modem cable is plugged into the modem jack and not the Ethernet network jack. See “Desktop PC Back” on page 12 to make sure that the connections have been made correctly.
- Make sure that your computer is connected to the telephone line and the telephone line has a dial tone.
- Make sure that the modem cable is less than 6 feet (1.8 meters) long.
- Remove any line splitters or surge protectors from your telephone line, then check for a dial tone by plugging a working telephone into the telephone wall jack.
- If you have additional telephone services such as call waiting, call messaging, or voice mail, make sure that all messages are cleared and call waiting is disabled before using the modem. Contact your telephone service to get the correct code to temporarily disable the service. Also make sure that the modem dialing properties are set correctly.


### To check the dialing properties:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers and Other Hardware**.
- 2 Click/Double-click the **Phone and Modem Options** icon, then click the **Dialing Rules** tab.
- 3 Click the location from which you are dialing, then click **Edit**.
- 4 Make sure that all settings are correct.



#### Help and Support



For more information about dialing properties, click **Start**, then click **Help and Support**. Type the keyword **dialing** in the **Search** box  , then click the arrow.

- Disconnect any answering machine, fax machine, or printer that is on the same line as the modem. Do not connect these devices to the same telephone line as the modem.
- Make sure that you are not using a digital, rollover, or PBX line. These lines do not work with your modem.
- Check for line noise (scratchy, crackling, or popping sounds). Line noise is a common problem that can cause the modem to connect at a slower rate, abort downloads, or even disconnect. The faster the modem, the less line noise it can tolerate and still work correctly.

Listen to the line using your telephone. Dial a single number (such as 1). When the dial tone stops, listen for line noise. Wiggle the modem cable to see if that makes a difference. Make sure that the connectors are free from corrosion and all screws in the wall or telephone wall jack are secure.

You can also call your telephone service and have the telephone line checked for noise or low line levels.

- Try another telephone line (either a different telephone number in your house or a telephone line at a different location). If you can connect on this line, call your telephone service.
- Try connecting with the modem at a lower connection speed. If reducing the connect speed lets you connect, call your telephone service. The telephone line may be too noisy.

### **You cannot connect to the Internet**

- The ISP may be having technical difficulties. Contact your ISP for technical support.
- See if the modem works with a different communications program. The problem may be with just one program.
- Review the troubleshooting information under “Internet” on page 66.

### **Your 56K modem does not connect at 56K**

Current FCC regulations restrict actual data transfer rates over public telephone lines to 53K. Other factors, such as line noise, telephone service provider equipment, or ISP limitations, may lower the speed even further.

If your computer has a v.90 modem, the speed at which you can upload (send) data is limited to 33.6K. If your computer has a v.92 modem, the speed at which you can upload data is limited to 48K. Your ISP may not support 48K uploads.

### **Your fax communications program only sends and receives faxes at 14,400 bps when you have a 56K modem**

Current fax technology only supports a maximum send and receive rate of 14,400 bps.

## The modem is not recognized by your computer

- Make sure that the line connected to the modem is working and plugged into the appropriate port on your computer. See “Desktop PC Back” on page 12 to make sure that the connections have been made correctly.
- If the modem shares the telephone line with another device, make sure that the telephone line is not in use (for example, someone is on the telephone, or another modem is in use).
- Use the modem cable that came with your computer. Some telephone cables do not meet required cable standards and may cause problems with the modem connection.
- Shut down and restart your computer.
- Run Windows modem diagnostics.




### To run modem diagnostics:

- 1 Close all open programs.
- 2 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers and Other Hardware**.
- 3 Click/Double-click the **Phone and Modem Options** icon, then click the **Modems** tab.
- 4 Click your modem, then click **Properties**. The *Modem Properties* dialog box opens.
- 5 Click the **Diagnostic** tab, then click **Query Modem**. If information about the modem appears, the modem passed diagnostics. If no modem information is available, a white screen appears with no data, or if you get an error such as *port already open* or *the modem has failed to respond*, the modem did not pass diagnostics.



### Help and Support



For more information about modem troubleshooting, click **Start**, then click **Help and Support**. Type the keyword **modem troubleshooting** in the **Search** box  , then click the arrow.

## The modem is noisy when it dials and connects

When your modem tries to connect to another modem, it begins *handshaking*. Handshaking is a digital “getting acquainted” conversation between the two modems that establishes connection speeds and communication protocols. You may hear unusual handshaking sounds when the modems first connect. If the handshaking sounds are too loud, you can turn down the modem volume.



To turn down the modem volume:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers and Other Hardware**.
- 2 Click/Double-click the **Phone and Modem Options** icon, then click the **Modems** tab.
- 3 Click the modem you want to adjust, then click **Properties**.
- 4 Click the **Modem** tab, then adjust the **Speaker volume** control.
- 5 Click **OK** twice to close the *Phone and Modem Options* dialog box.



## Monitor

**The screen resolution is not correct**

Change the screen resolution from the *Display Properties* dialog box.


### Tips & Tricks



For more information, see “Adjusting the color depth” in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

### Help and Support



For more information about changing the screen resolution, click **Start**, then click **Help and Support**. Type the keyword **screen resolution** in the **Search** box  , then click the arrow.

**The computer is running but there is no picture**

- Make sure that the monitor is plugged in and turned on. If the monitor is turned on, the power LED should be lit.
- Adjust the brightness and contrast controls to the center position.
- Make sure that the monitor cable is connected to the video port on the back of your computer.
- Check the cable for bent or damaged pins.
- Reinstall the device driver.
- Connect a monitor that you know works to your computer.

### The color is not uniform

Make sure that the monitor warms up for at least 30 minutes before making a final judgment about color uniformity.

Make sure that:

- Non-shielded speakers are not placed too close to the monitor.
- The monitor is not positioned too close to another monitor, electric fan, fluorescent light, metal shelf, or laser printer.
- You demagnetize the screen using the monitor's degauss feature. For more information on degauss, see your monitor's documentation.

### Why is there a horizontal line or wire visible across the monitor screen?

Your monitor may use a thin *dampener* wire, located approximately 1/3 of the way down from the upper screen edge and 1/3 of the way up from the lower screen edge, to stabilize the internal aperture grille. These wires are most obvious when the monitor displays a white background. The aperture grille allows more light to pass through the screen for brighter colors and greater luminescence. The dampener wire is a critical part of the overall monitor design and does not negatively affect the monitor's function.

### The text on the display is dim or difficult to read

- Adjust the brightness and contrast controls.
- Use the monitor degauss feature (see your monitor documentation) or turn off your computer and monitor, leave them off for at least a half hour, then restart your computer.
- Change the display settings.

#### Tips & Tricks



For more information, see "Adjusting the screen and desktop settings" in *Using Your Computer* which has been included on your hard drive. To access this guide, click **Start**, **All Programs**, then click **Gateway Documentation**.

- Move the monitor away from sources of electrical interference, such as televisions, unshielded speakers, microwaves, fluorescent lights, and metal beams or shelves.

For more information about display types, see your monitor and video card documentation.

## Mouse

### The mouse does not work

- Make sure that the mouse cable is plugged in correctly.
- Shut down and restart your computer.
- Remove all extension cables and switch boxes.
- Try a mouse you know is working to make sure that the mouse port works.

### The mouse works erratically

If the mouse pointer begins moving erratically across the computer display or becomes difficult to control precisely, cleaning the mouse will likely improve its accuracy.

Clean the mouse by wiping the bottom with a clean, damp cloth. Make sure that the optical sensor is clean and free of debris.


## Networks

### You cannot connect to your company network

Every network is unique. Contact your company computer department or network administrator for help. For more information about setting up a network in your home, see “Networking Your Computer” on page 81.

#### Help and Support



For more information about network troubleshooting, click **Start**, then click **Help and Support**. Type the keyword **network troubleshooting** in the **Search** box  , then click the arrow.

## Passwords

### Your computer does not accept your password

Make sure that **CAPS LOCK** is turned off, then retype the password.

# Power

## Your computer will not turn on

- Make sure that your power cord is connected correctly to your computer.
- If your computer is plugged into a surge protector, make sure that the surge protector is connected securely to an electrical outlet, turned on, and working correctly. To test the outlet, plug a working device, such as a lamp, into the outlet and turn it on.
- Make sure that the power cord is free from cuts or damage. Replace any damaged cables.

# Printer

## The printer will not turn on

- Make sure that the printer is online. Many printers have an online/offline button that you may need to press.
- Make sure that the power cable is plugged into an AC power source.

## The printer is on but will not print

- Check the cable between the printer and your computer. Make sure that it is connected to the correct port.
- Make sure that the printer is online. Many printers have an online/offline button that you may need to press so the printer can start printing. Press the button to put the printer online.
- Check the cable for bent or broken pins.
- If the printer you want to print to is not the default printer, make sure that you have selected it in the printer setup.



To set a default printer:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers and Other Hardware**.
- 2 Click/Double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.
- 3 Right-click the name of the printer you want to be the default printer, then click **Set as Default Printer**.



- Reinstall the printer driver. See the guide that came with your printer for instructions on installing the printer driver.

### You see a “Printer queue is full” error message

- Make sure that the printer is not set to work offline.




To make sure that the printer is not set to work offline:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Printers and Other Hardware**.
- 2 Click/Double-click the **Printers and Faxes** icon. The *Printers and Faxes* window opens.
- 3 Right-click the name of the printer you want to use. If the menu shows a check mark next to **Use Printer Offline**, click **Use Printer Offline** to clear the check mark.



#### Help and Support



For more information about printer troubleshooting, click **Start**, then click **Help and Support**. Type the keyword **printer troubleshooter** in the **Search** box  , then click the arrow.

- Wait until files have been printed before sending additional files to the printer.
- If you print large files or many files at one time, you may want to add additional memory to the printer. See the printer documentation for instructions for adding additional memory.

### You see a “Printer is out of paper” error message

After adding paper, make sure that the printer is online. Most printers have an online/offline button that you need to press after adding paper.


# Sound

## You are not getting sound from the speakers

- Make sure that the speakers are turned on.
- Make sure that the volume controls are turned up. For more information, see “Adjusting the volume” on page 30.
- Make sure that mute controls are turned off. For more information, see “Adjusting the volume” on page 30.
- If you are using external speakers, see the speaker setup poster to check your speaker connections.
- Make sure that the universal jacks are configured correctly. For more information, see “Configuring the audio jacks” on page 30.

### Help and Support



For more information about sound troubleshooting, click **Start**, then click **Help and Support**. Type the keyword **sound troubleshooter** in the **Search** box Search  , then click the arrow.

# Telephone support

## Before calling Gateway Customer Care

If you have a technical problem with your computer, follow these recommendations before contacting Gateway Customer Care:

- Make sure that your computer is connected correctly to a grounded AC outlet that is supplying power. If you use a surge protector, make sure that it is turned on.
- If a peripheral device, such as a keyboard or mouse, does not appear to work, make sure that all cables are plugged in securely.
- If you have recently installed hardware or software, make sure that you have installed it according to the instructions provided with it. If you did not purchase the hardware or software from Gateway, see the manufacturer's documentation and technical support resources.
- If you have "how to" questions about using a program, see:
  - Online Help
  - Printed documentation
  - The Microsoft Windows documentation
  - The software publisher's Web site
- See the troubleshooting section of this chapter.

### Warning



To avoid bodily injury, do not attempt to troubleshoot your computer problem if:

- Power cords or plugs are damaged
- Liquid has been spilled into your computer
- Your computer was dropped
- The case was damaged

Instead, unplug your computer and contact a qualified computer technician.

- Have your customer ID, serial number, and order number available, along with a detailed description of your problem, including the exact text of any error messages, and the steps you have taken.
- Make sure that your computer is nearby at the time of your call. The technician may have you follow troubleshooting steps.

# Telephone numbers

Gateway offers a wide range of customer service, Customer Care, and information services.

## Automated troubleshooting system

Service description	How to reach
Use an automated menu system and your telephone keypad to find answers to common problems.	800-846-2118 (US and Canada)

## Telephone numbers

You can access the following services through your telephone to get answers to your questions:

Resource	Service description	How to reach
Answers by Gateway	Get tutorial assistance for hardware and software issues.	<a href="http://www.gateway.com/answers">www.gateway.com/answers</a>
Gateway Customer Care	Talk to a Gateway Customer Care representative about a non-tutorial technical support question. (See “Before calling Gateway Customer Care” on page 78 before calling)	Gateway Customer Care telephone numbers vary by country or region. See the label on the front of your computer. For more information, see “Identifying your model” on page 15.
	TDD Customer Care (for hearing impaired) is available: Weekdays 8:00 a.m. - 10:00 p.m. Pacific Time Weekends 8:00 a.m. - 7:00 p.m. Pacific Time	800-846-1778 (US) 605-232-2191 (all other countries)
Sales, accounting, and warranty	Get information about available systems, pricing, orders, billing statements, warranty service, or other non-technical issues.	800-846-2000 (US) 888-387-7752 (Canada)


# Self-help

If you have *how-to* questions about using your Gateway-supplied hardware or software, see the following resources:

- The printed or online documentation that came with your hardware or software. In many cases, additional product information and online documentation for Gateway-supplied hardware can be found in our Web site's Documentation Library.
- This user guide and the *Using Your Computer* guide.
- The software publisher's Web site.

Help and  
Support



For more how-to information about Windows, click **Start**, then click **Help and Support**. Type the keyword **practice** in the **Search** box Search  , then click the arrow.

# Tutoring

Answers by Gateway<sup>SM</sup> is a telephone service that provides answers to all of your “How do I” questions on Gateway computers. For more information, go to [www.gateway.com/answers](http://www.gateway.com/answers).

# Training

Gateway provides the following computer-based training:

Resource	Service description	For more information
Gateway Learning Libraries	A variety of courses and tutorials are available on CD. Select from several easy-to-use learning libraries.	<a href="http://www.gateway.com/training">www.gateway.com/training</a>
Online Training from Learn With Gateway	More than 450 online courses are available from Learn With Gateway. All you have to do is go online and log in. You select the subject matter, and the learning format (self-paced tutorials or virtual classrooms), all from the comfort of your computer.	<a href="http://www.learnwithgateway.com">www.learnwithgateway.com</a>

# Chapter 7

## Networking Your Computer

- Introducing networking
- Creating an Ethernet network
- Testing your network
- Troubleshooting your Ethernet network

# Introduction to Networking

An Ethernet network consists of two or more computers connected together through an Ethernet cable. This connection type is commonly used in offices around the world and can be used to build computer networks in the home.

## Ethernet, Fast Ethernet, or Gigabit Ethernet

Ethernet is available at three different speeds. Standard Ethernet runs at 10 Mbps, Fast Ethernet runs at 100 Mbps, and Gigabit Ethernet runs at 1000 Mbps. Most home networks are built using Standard or Fast Ethernet components. Business networks are typically built using Fast or Gigabit Ethernet components.

To create an Ethernet network, you or your electrician must install special Ethernet cables in your home or office.

**Important**




Check local code requirements before installing Ethernet cable or other wiring in your home or office. Your municipality may require you to obtain a permit and hire a licensed installer.

## Using a router

The most common way to set up an Ethernet network is Dynamic Host Control Protocol (DHCP) using a router. A DHCP network configuration uses a router to automatically assign IP addresses to each computer or network device.

## Example router-based Ethernet network

The following is an example of an Ethernet network. The network is made up of a router, a cable or DSL modem, your computers, and cables connecting each of these components. The router is the central control point for the network. Attached to the router are all of your computers or Ethernet-ready devices. Also connected to the router is a cable or DSL modem that provides access to the Internet.

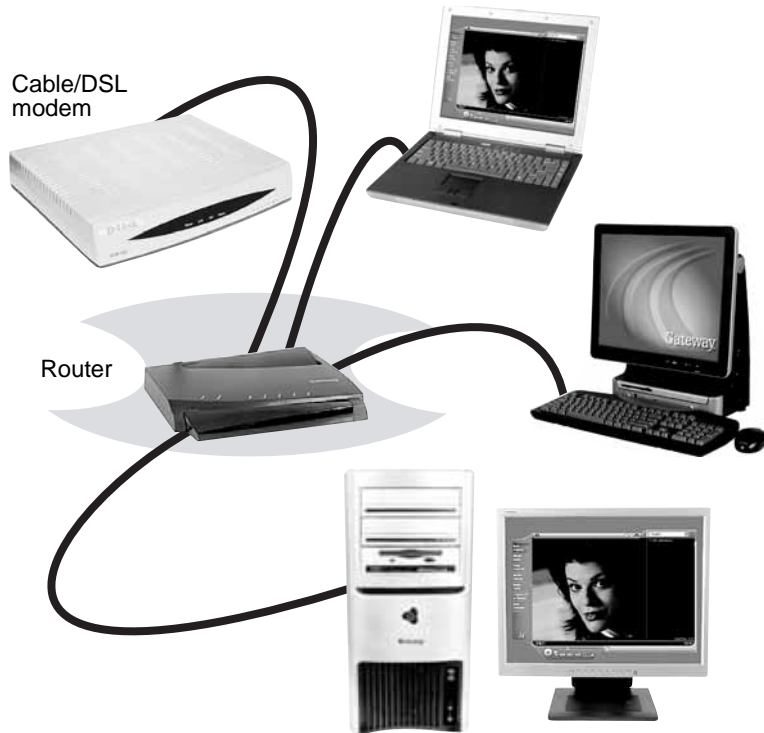

### Tips & Tricks



To add the ability to access a wireless Ethernet network to your wired Ethernet network, connect an access point to the router or use a router that has a built-in access point, such as the Linksys wireless access point router with 4-port switch.

## Equipment you need for a router-based Ethernet network

For an Ethernet network you need:

- Two or more computers with Ethernet jacks
- One router
- One broadband Internet connection (optional)
- Ethernet cables connecting all of the network equipment

**Important**



For best results, all Ethernet components should be either standard Ethernet (10 Mbps), Fast Ethernet (100 Mbps or 10/100), or Gigabit Ethernet (1000 Mbps or 10/100/1000). A mixture of components rated at different speeds will result in your network running at the speed of the slowest rated component.

**Tips & Tricks**



When buying your router, be sure the model includes everything your network needs, including:

- Internet security features - such as a firewall to protect your network from unwanted intruders
- 4-port switch - to eliminate the need for additional network hardware
- DHCP server/dynamic IP address assignment - to automatically configure network and IP addresses

## Determining if an Ethernet is already installed on your computers



To determine if Ethernet is already installed on your computer:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Performance and Maintenance**.
- 2 Click/Double-click **System**, click the **Hardware** tab, then click **Device Manager**. The *Device Manager* window opens.
- 3 Click the plus (+) in front of **Network adapters**. The Ethernet device installed in your computer is listed. If one is not listed, you must install one.



# Creating an Ethernet network

## Installing Ethernet cards and drivers

After you have determined the type of Ethernet you are using for your network, you need to install Ethernet cards and drivers on the computers that do not have Ethernet already installed. To order wired or wireless Ethernet PCI or PC cards, visit the Accessories Store at [accessories.gateway.com](http://accessories.gateway.com).

Use the documentation that comes with your Ethernet cards for instructions on installing the card and any required drivers.

## Making sure your broadband connection works

Before you change anything about your home setup, make sure that your broadband connection is working correctly. To test the connection, log onto the Internet using your current setup. If the connection is not working, contact your Internet service provider.

**Important**



If you do not have a broadband connection already installed, make the necessary arrangements with your ISP. Be sure to find out how soon after the installation the line will be activated.

**Important**



Broadband Internet settings will differ from ISP to ISP. Before you begin setting up your network, you should contact your ISP for any specific instructions they have for setting up a network.

## Naming the computers and the workgroup

**Important**



You must give each computer on the network a unique Computer Name and the same Workgroup Name.



To identify this computer on the network:

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Performance and Maintenance**. The *Performance and Maintenance* window opens.
- 2 Click/Double-click **System**. The *System Properties* dialog box opens.
- 3 Click **Computer Name**.
- 4 Click **Change**. The *Computer Name Changes* dialog box opens.
- 5 Type a unique computer name in the **Computer name** box. This name identifies the computer to other users on the network. Use a computer name of up to 15 characters with no blank spaces. Each computer name must be unique on your network. All-numeric computer names are not allowed. Names must contain some letters.
- 6 Type a name for your workgroup in the **Workgroup** box. Use a workgroup name of up to 15 characters with no blank spaces. The workgroup name must be the same for all computers in your network workgroup, and the name must be different than any computer name on your network.
- 7 Click **OK** to close the *Computer Name Changes* dialog box.



## Configuring the TCP/IP protocol

A networking protocol is a language computers use to talk to each other. One of several available protocols must be set up on each computer you plan to use on your network. We recommend you use the Transmission Control Protocol/Internet Protocol (TCP/IP), which is widely accepted and compatible for local area networks (LANs), as well as for Internet communications.

When networking is set up in Windows XP, TCP/IP is automatically installed as the default protocol.

### Terms you should know

**DHCP** - Dynamic Host Configuration Protocol (DHCP) lets a router temporarily assign an IP address to a computer on the network.

**IP Address** - Internet Protocol (IP) address is a number that uniquely identifies a computer on the network.

**Subnet Mask** - Subnet mask is a number that identifies what subnetwork the computer is located on. This number will be the same on all computers on a home network.

### Using a DHCP server

In order to use the TCP/IP protocol on each computer with a router or access point router, you must set the protocol to “Obtain an IP address from a DHCP server.”




#### To use a DHCP server

- 1 Click **Start**, then click **Control Panel**. The *Control Panel* window opens. If your Control Panel is in Category View, click **Network and Internet Connections**. The *Network and Internet Connections* window opens.
- 2 Click/Double-click **Network Connections**. The *Network Connections* window opens.

- 3** Right-click **Local Area Connection**, then click **Properties**. The *Local Area Connection Properties* dialog box opens.


- OR -

If you do not have a LAN connection setup, click **Create a new connection** and follow the instructions in the New Connection Wizard.

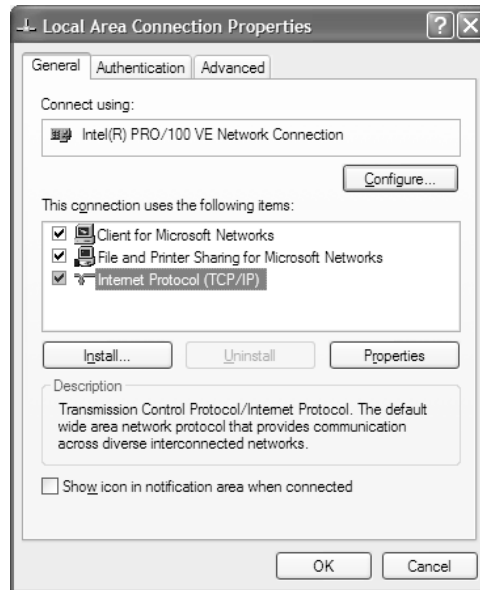

- 4** Click to select the **Internet Protocol (TCP/IP)** check box in the **This connection uses the following items** list. If you do not see TCP/IP, drag the scroll bar to see more choices.
- 5** Click **Properties**. The *Internet Protocol (TCP/IP) Properties* dialog box opens.

**6** Click the **General** tab.

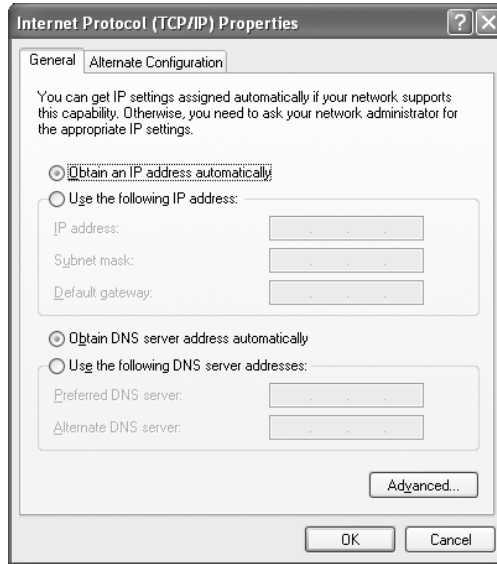

**7** Click **Obtain an IP address automatically**.

**8** Click **OK** to close the *Internet Protocol (TCP/IP) Properties* dialog box.

**9** Click **OK** to close the *Local Area Connection Properties* dialog box.

**10** Click **X** to close the *Network Connections* window.

**11** Repeat this procedure for every computer on your network.



## Setting up an Ethernet network

We recommend using category 5, unshielded, twisted-pair cable (approximately 1/4" in diameter with a thin outer-jacket, containing eight color-coded wires), and equipment compatible with this type of cable. This type of cable is equipped with RJ-45 connectors (like a large telephone jack connector, but with eight pins) on each end.

**Important**


Category 5 cables are available in two different types; straight-through cables, used to connect computers to a router, and crossover cables, used to connect two computers.

To determine which type of cable you have, hold both ends of the cable with the connectors facing away from you and with the spring clip on the bottom. For straight-through cable, the wires on both connectors are attached to copper pins in the same order (same colors, left to right). For a crossover cable, the wires on each connector are attached to the copper pins in a different order (different colors, left to right).

## Setting up a network using a router

If you are setting up a network for more than two computers and you will be connecting your network to a high-speed Broadband Internet connection (cable or DSL modem), we recommend the use of a router. A router lets you access the Internet connection from any network computer. The router can assign IP addresses to the computers on the network and can provide firewall protection for your network as well.

In addition to a router, you need a straight-through cable for each computer you want to connect to the network.

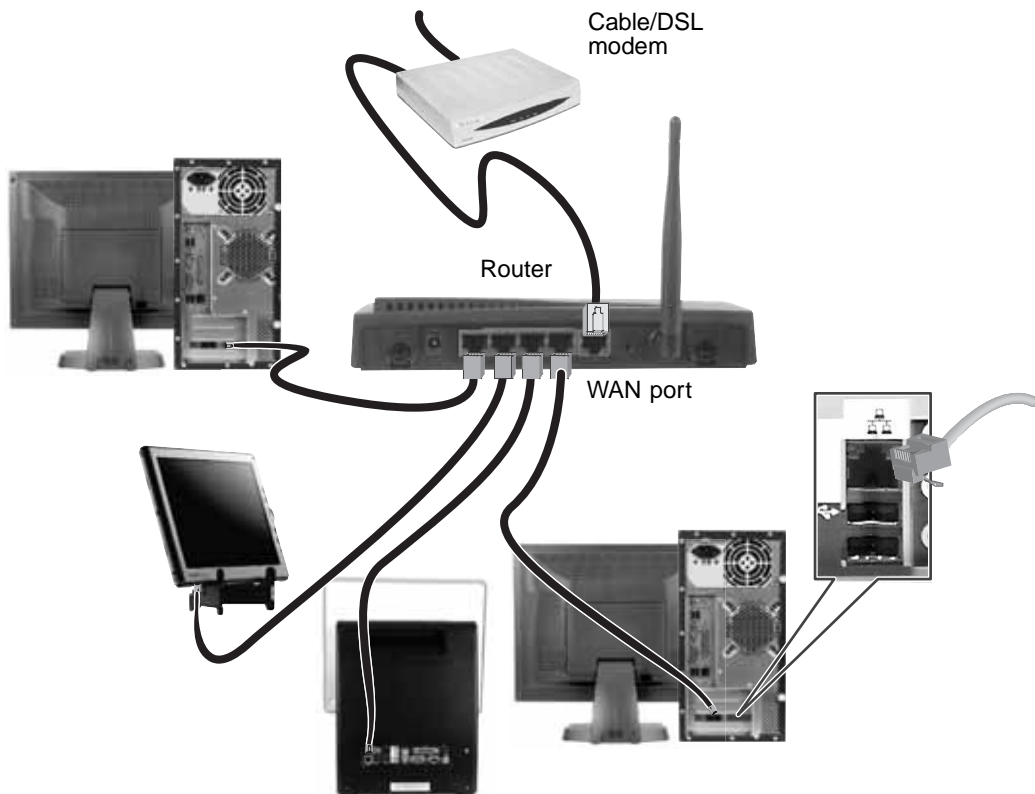

 To set up a network using a router:

- 1 Plug one end of the power adapter into the AC connector on the router and the other end into a grounded, 110V electrical outlet.
- 2 Turn on your computers.
- 3 Plug one end of a straight-through network cable into any numbered port on the router (except the WAN port). The WAN port is used to connect the router to the DSL or cable modem, and is identified by a label or a switch. Plug the other end of the cable into the network connector on the computer. As each computer is connected to the router, the corresponding green indicator should light on the front of the router, indicating a good connection.
- 4 Repeat Step 3 for each computer on the network.
- 5 For an Internet connection, plug a straight-through cable into the WAN port on the router and the other end into the Ethernet jack on the DSL or cable modem.



## Configuring your router

After you have named your computers and set up TCP/IP on them, you can configure your router using your Web browser. For these instructions, we assume that you are using the router to connect your network to a high-speed Broadband Internet connection through an Internet service provider (ISP) and that you are configuring it as a DHCP server.

**Important**



The following configuration information applies to the Linksys® EtherFast Cable/DSL routers. For any other brand or model of router, see the manufacturer's documentation, which may accompany the router or be available from the manufacturer's Web site.

 To configure the Linksys EtherFast Cable/DSL router:

- 1 From one of the computers connected to the network, open your Web browser, type **http://192.168.1.1** in the browser's address box, then press **ENTER**.
- 2 When prompted for a username and password, leave the username box empty and type **admin** in the password box, then click **OK**. The Setup page opens.
- 3 Enter the following values in the appropriate fields:

- **Router Name and Domain Name** - Check with your ISP to see if entries are required in these fields and, if so, what entries are required. Normally, leaving the fields blank will work.
  - **LAN IP Address** - We recommend that you accept the defaults.
  - **WAN IP Address** - If your ISP assigns you a different IP address each time you log on, click **Obtain an IP Address Automatically**. If your ISP requires a fixed IP address, click **Specify an IP Address**, then type the values provided by your ISP.
- 4 When you are finished entering information on the Setup page, click **Apply**.
  - 5 Click the **DHCP** tab on the top of the screen.
  - 6 Click the **Enable** checkbox, then click **Apply**.
  - 7 Press the reset button on your cable or DSL modem, then restart the computer. Your network should be running. Go to “Testing your network” on page 92.



# Testing your network

Now that your home network is set up, log onto one of your computers and access a favorite Internet Web site.

If you are unable to connect to the Internet:

- Run the New Connection Wizard (for more information, see “Using Your Computer guide” on page 7)
- Check all physical cable connections
- Compare the status lights on the front of the router or access point with the patterns described in the router or access point literature
- Temporarily turn off any firewall software on your desktop computer
- Turn off all of the devices, then power them back on
- Refer to your router’s or access point’s troubleshooting information
- Contact your Internet service provider

# Troubleshooting Your Ethernet network

## **You cannot see the other computers on your network**

- Make sure that your Ethernet cable is plugged into the Ethernet jack on your computer. Make sure that the other end is plugged into a router.
- Make sure that all computers are plugged into a powered electrical outlet and turned on.
- Make sure that the router is plugged into a powered electrical outlet and turned on. Most routers have lights that indicate they are working. For more information, see the documentation that came with your router.
- Make sure that all computers on your network have the same workgroup name.
- Make sure that all computers are using the same Subnet Mask.
- If you assigned IP addresses to the computers, make sure that all computers have different IP addresses. For home networks, IP addresses should be 192.168.N.N where N is a number you assign between 0 and 254. The first N should be the same for all computers on your network and the second N should be different for all computers on your network.

## **The computer does not recognize an add-in Ethernet card**

- Shut down and restart your computer.
- Make sure that you have installed the required software. For more information, see the documentation that came with your Ethernet card.
- Reseat the card. For more information, about opening your computer case, see “Opening the case” on page 51. For more information about your Ethernet card, see the documentation that came with your Ethernet card.

## **Your Ethernet network is running slower than you expect**

- If your Ethernet network is running slower than you expect, check the speed of each Ethernet component. For best results, all Ethernet components should be standard Ethernet (10 Mbps), Fast Ethernet (100 Mbps or 10/100 Mbps), or Gigabit Ethernet (1000 Mbps or 10/100/1000 Mbps). A mixture of Ethernet, Fast Ethernet, and Gigabit Ethernet components will result in your network running at the slowest component speed.



# Appendix A

## Safety, Regulatory, and Legal Information

- Safety information
- Regulatory statements
- Notices

# Important safety information

Your Gateway system is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that the safety instructions marked on the product and in the documentation are followed.

## Warning



Always follow these instructions to help guard against personal injury and damage to your Gateway system.

## Setting up your system

- Read and follow all instructions marked on the product and in the documentation before you operate your system. Retain all safety and operating instructions for future use.
- Do not use this product near water or a heat source such as a radiator.
- Set up the system on a stable work surface.
- The product should be operated only from the type of power source indicated on the rating label.
- If your computer has a voltage selector switch, make sure that the switch is in the proper position for your area. The voltage selector switch is set at the factory to the correct voltage.
- Openings in the computer case are provided for ventilation. Do not block or cover these openings. Make sure you provide adequate space, at least 6 inches (15 cm), around the system for ventilation when you set up your work area. Never insert objects of any kind into the computer ventilation openings.
- Some products are equipped with a three-wire power cord to make sure that the product is properly grounded when in use. The plug on this cord will fit only into a grounding-type outlet. This is a safety feature. If you are unable to insert the plug into an outlet, contact an electrician to install the appropriate outlet.
- If you use an extension cord with this system, make sure that the total ampere rating on the products plugged into the extension cord does not exceed the extension cord ampere rating.
- If your system is fitted with a TV Tuner, cable, or satellite receiver card, make sure that the antenna or cable system is electrically grounded to provide some protection against voltage surges and buildup of static charges.

## Care during use

- Do not walk on the power cord or allow anything to rest on it.
- Do not spill anything on the system. The best way to avoid spills is to avoid eating and drinking near your system.
- Some products have a replaceable CMOS battery on the system board. There is a danger of explosion if the CMOS battery is replaced incorrectly. Replace the battery with the same or equivalent type recommended by the manufacturer. Dispose of batteries according to the manufacturer's instructions.
- When the computer is turned off, a small amount of electrical current still flows through the computer. To avoid electrical shock, always unplug all power cables and modem cables from the wall outlets before cleaning the system.
- Unplug the system from the wall outlet and refer servicing to qualified personnel if:
  - The power cord or plug is damaged.
  - Liquid has been spilled into the system.
  - The system does not operate properly when the operating instructions are followed.
  - The system was dropped or the cabinet is damaged.
  - The system performance changes.

## Replacement parts and accessories

Use only replacement parts and accessories recommended by Gateway.

**Warning**

Do not use Gateway products in areas classified as hazardous locations. Such areas include patient care areas of medical and dental facilities, oxygen-laden environments, or industrial facilities.

**Warning**

To reduce the risk of fire, use only No. 26 AWG or larger telecommunications line cord.

# Regulatory compliance statements

## United States of America

### Federal Communications Commission (FCC) Unintentional emitter per FCC Part 15

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment to an outlet on a different circuit from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

**Compliance Accessories:** The accessories associated with this equipment are: shielded video cable when an external monitor is connected. These accessories are required to be used in order to ensure compliance with FCC rules.

### FCC declaration of conformity

**Responsible party:**

Gateway, Inc.  
7565 Irvine Center Drive  
Irvine, CA 92618 USA

This device complies with Part 15 of the FCC Rules. Operation of this device is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Caution**

Changes or modifications not expressly approved by Gateway could void the FCC compliance and negate your authority to operate the product.

## California Proposition 65 Warning

### Warning



This product contains chemicals, including lead, known to the State of California to cause cancer, birth defects or reproductive harm.

## Telecommunications per Part 68 of the Code of Federal Regulations (CFR 47) (applicable to products fitted with USA modems)

Your modem complies with Part 68 of the Code of Federal Regulations (CFR 47) rules. On the computer or modem card is a label that contains the FCC registration number and Ringer Equivalence Number (REN) for this device. If requested, this information must be provided to the telephone company.

A telephone line cord with a modular plug is required for use with this device. The modem is designed to be connected to the telephone network or premises wiring using a compatible modular jack which is Part 68-compliant. See installation instructions for details.

The Ringer Equivalence Number (REN) is used to determine the number of devices which may be connected to the telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company.

If this device causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. The telephone company may request that you disconnect the equipment until the problem is resolved.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of this equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

This equipment cannot be used on telephone company-provided coin service. Connection to party line service is subject to state tariffs. Contact the state public utility commission or public service commission for information.

When programming or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call.
- Perform such activities in the off-peak hours such as early morning or late evenings.

The United States Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device to send any message via a telephone fax machine unless such message clearly contains, in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent, an identification of the business, other entity, or other individual sending the message, and the telephone number of the sending machine or such business, other entity, or individual. Refer to your fax communication software documentation for details on how to comply with the fax-branding requirement.

## Canada

### Industry Canada (IC) Unintentional emitter per ICES-003

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the radio interference regulations of Industry Canada.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Classe B prescrites dans le règlement sur le brouillage radioélectrique édicté par Industrie Canada.

## Telecommunications per Industry Canada CS-03 (for products fitted with an IC-compliant modem)

The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective, operation, and safety requirements. The Department does not guarantee the equipment will operate to the users' satisfaction.

Before installing this equipment, users should make sure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. In some cases, the inside wiring associated with a single-line individual service may be extended by means of a certified connector assembly. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should make sure, for their own protection, that the electrical ground connections of the power utility, telephone lines, and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

### Warning



To avoid electrical shock or equipment malfunction do not attempt to make electrical ground connections by yourself. Contact the appropriate inspection authority or an electrician, as appropriate.

The **Ringer Equivalence Number** (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5.

## Laser safety statement

All Gateway systems equipped with CD and DVD drives comply with the appropriate safety standards, including IEC 825. The laser devices in these components are classified as "Class 1 Laser Products" under a US Department of Health and Human Services (DHHS) Radiation Performance Standard. Should the unit ever need servicing, contact an authorized service location.

### Warning



Use of controls or adjustments or performance of procedures other than those specified in this manual may result in hazardous radiation exposure. To prevent exposure to laser beams, do not try to open the enclosure of a CD or DVD drive.

## Television antenna connectors protection (for systems fitted with TV/cable TV tuner cards)

### External television antenna grounding

If an outside antenna or cable system is to be connected to your Gateway PC, make sure that the antenna or cable system is electrically grounded to provide some protection against voltage surges and static charges.

Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Lightning protection

For added protection of any Gateway product during a lightning storm or when it is left unattended or unused for long periods of time, unplug the product from the wall outlet and disconnect the antenna or cable system.


Power lines

Do not locate the antenna near overhead light or power circuits, or where it could fall into such power lines or circuits.

Warning



When installing or realigning an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits. Contact with them could be fatal.

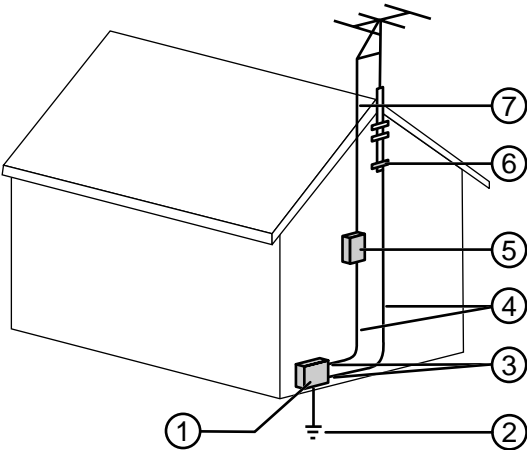

Antenna and satellite grounding

Reference	Grounding component
1	Electric service equipment
2	Power service grounding electrode system (NEC Art 250, Part H)
3	Ground clamps
4	Grounding conductors (NEC Section 810-21)
5	Antenna discharge unit (NEC Section 810-20)
6	Ground clamp
7	Antenna lead-in wire

# Environmental information

The product you have purchased contains extracted natural resources that have been used in the manufacturing process. This product may contain substances known to be hazardous to the environment or to human health.

To prevent releases of harmful substances into the environment and to maximize the use of our natural resources, Gateway provides the following information on how you can responsibly recycle or reuse most of the materials in your “end of life” product.

Waste Electrical and Electronic Equipment (commonly known as WEEE) should never be disposed of in the municipal waste stream (residential garbage collection). The “Crossed-Out Waste Bin” label affixed to this product is your reminder to dispose of your “end of life” product properly.



Substances such as glass, plastics, and certain chemical compounds are highly recoverable, recyclable, and reusable. You can do your part for the environment by following these simple steps:

- When your electrical or electronic equipment is no longer useful to you, “take it back” to your local or regional waste collection administration for recycling.
- In some cases, your “end of life” product may be “traded in” for credit towards the purchase of new Gateway equipment. Call Gateway to see if this program is available in your area.
- If you need further assistance in recycling, reusing, or trading in your “end of life” product, you may contact us at the Customer Care number listed in your product’s user guide and we will be glad to help you with your effort.

Finally, we suggest that you practice other environmentally friendly actions by understanding and using the energy-saving features of this product (where applicable), recycling the inner and outer packaging (including shipping containers) this product was delivered in, and by disposing of or recycling used batteries properly.

With your help, we can reduce the amount of natural resources needed to produce electrical and electronic equipment, minimize the use of landfills for the disposal of “end of life” products, and generally improve our quality of life by ensuring that potentially hazardous substances are not released into the environment and are disposed of properly.

# Notices

Copyright © 2005 Gateway, Inc.  
All Rights Reserved  
7565 Irvine Center Drive  
Irvine, CA 92618 USA

## All Rights Reserved

This publication is protected by copyright and all rights are reserved. No part of it may be reproduced or transmitted by any means or in any form, without prior consent in writing from Gateway.

The information in this manual has been carefully checked and is believed to be accurate. However, changes are made periodically. These changes are incorporated in newer publication editions. Gateway may improve and/or change products described in this publication at any time. Due to continuing system improvements, Gateway is not responsible for inaccurate information which may appear in this manual. For the latest product updates, consult the Gateway Web site at [www.gateway.com](http://www.gateway.com). In no event will Gateway be liable for direct, indirect, special, exemplary, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages.

In the interest of continued product development, Gateway reserves the right to make improvements in this manual and the products it describes at any time, without notices or obligation.

## Trademark Acknowledgments

Gateway and the Black-and-White Spot Design are trademarks or registered trademarks of Gateway, Inc. in the U.S. and other countries. SpotShop, Spotshop.com, and Your:)Ware are trademarks of Gateway, Inc. Intel, Intel Inside logo, and Pentium are registered trademarks and MMX is a trademark of Intel Corporation. Microsoft, MS, MS-DOS, and Windows are trademarks or registered trademarks of Microsoft Corporation. All other product names mentioned herein are used for identification purposes only, and may be the trademarks or registered trademarks of their respective companies.

# Macrovision statement

**If your computer has a DVD drive and an analog TV Out port, the following paragraph applies:**

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

# Index

## A

- AC power connector 13
- accessories 16
  - safety precautions 96
- activity indicators
  - See indicators
- application key 27
- arrow keys 27
- audio
  - audio in jack 14
  - center speaker jack 14
  - configuring jacks 30
  - front speaker jack 14
  - headphone jack 14
  - line in jack 14
  - line out jack 14
  - microphone jack 11, 14
  - muting 30
  - rear speaker jack 13
  - side speaker jack 14
  - subwoofer jack 14
- audio CD
  - See CD
- audio in jack 14
- audio playback buttons 26

## B

- battery
  - replacing 57
- bezel
  - removing 52
  - replacing 54
- broadband connection 31, 85
  - connecting 13
- buttons
  - See keys and buttons

## C

- cable modem 31, 83, 89
  - connecting 13
- Caps Lock indicator 27
- cards
  - installing memory card 36
  - removing memory card 36
  - slots 35
  - troubleshooting add-in card 61
  - troubleshooting memory card 68
  - types of memory cards supported 35

## case

- closing 53
- opening 51

## CD

- cleaning 47
- inserting 38
- playing audio 39
- recording 39
- troubleshooting 61

## CD drive

- identifying 37
- locating drive 11
- troubleshooting 61

## cellular phone

- memory cards 35

## Certificate of Authenticity 15

## cleaning

- audio CD 47
- case 46
- CD 47
- computer exterior 46
- computer screen 47
- DVD 47
- keyboard 46
- LCD panel 47
- mouse 47
- screen 47

## clicking 29

## closing

- computer case 53
- front bezel 54
- unresponsive program 25

## computers

- naming 85

## configuring

- audio jacks 30
- router 90

- speakers 30
- TCP/IP protocol 86
- connecting
  - modem 31
  - PS/2 keyboard 14
  - PS/2 mouse 14
  - to Ethernet network 13, 31
  - to Internet 13, 31
  - to network 13, 31
- connections
  - audio in 14
  - center speaker 14
  - digital camera 11, 14, 32
  - digital video camera 11, 13, 32
  - Ethernet 13, 31
  - external audio 14
  - external speakers 14
  - Firewire 11, 13, 32
  - front speaker 14
  - headphone 14
  - i.Link 11, 13, 32
  - IEEE 1394 11, 13, 32
  - keyboard 11, 14
  - line in 14
  - line out 14
  - microphone 11, 14
  - modem 13, 31
  - monitor 14
  - mouse 11, 14
  - network 13, 31
  - parallel 13
  - power 13
  - power cord 13
  - printer 11, 13, 14
  - PS/2 keyboard 14
  - PS/2 mouse 14
  - rear speakers 13
  - scanner 11, 14
  - serial 14
  - side speaker 14
  - subwoofer 14
  - S-Video (TV) out 13
  - universal 30, 77
  - USB 11, 14
  - video camera 11, 13
  - Zip drive 11, 14

- Customer Service
  - Accounting 79
  - Sales 79
  - Warranty 79

## D

- default printer 75
- DHCP 86
- digital camera
  - locating serial port 14
  - locating USB port 11, 14
- digital video camera
  - locating IEEE 1394 port 11, 13
- DIMM
  - See memory
- directional keys 27
- diskette
  - drive 34
  - troubleshooting 63
- diskette drive
  - identifying 34
  - troubleshooting 63
  - using 34
- display
  - troubleshooting 64
- documentation
  - Gateway Web site 3
  - help 5
  - Help and Support 5
  - online help 7
  - Using Your Computer 7
- domain name 91
- double-clicking 29
- dragging 29
- drivers
  - updating 3
- drives
  - CD 11, 37
  - diskette 34
  - DVD 11, 37
  - identifying drive types 37
  - recordable CD 11, 37
  - recordable DVD 11, 37
  - troubleshooting 61, 63, 64, 65
  - types 37
- DSL modem 31, 83, 89

- connecting 13
- DVD
  - cleaning 47
  - drive 37
  - inserting 38
  - playing 39
  - recording 39
  - troubleshooting 61, 64
- DVD drive
  - identifying 37
  - locating drive 11
  - troubleshooting 61, 64
  - using 37
- DVD/CD drive
  - See DVD drive
- Dynamic Host Configuration Protocol 86

## E

- editing buttons 26
- electrostatic discharge (ESD) 50
- entering
  - IP address 86
  - subnet mask 86
- ergonomics 20
- eSupport
  - using 3
- Ethernet
  - connecting 31
  - equipment needed 83
  - example 83
  - installing cards 84
  - installing drivers 84
  - jack 31

- Ethernet jack 13

- Ethernet network

- creating 84

- external audio jack 14

## F

- Fast Ethernet 82

- faxes

- troubleshooting 70

- files

- opening 29

- troubleshooting 64

- finding

- Help and Support topics 6

- specifications 16

- Firewire port 11, 13, 32

- folders

- opening 29

- front bezel

- removing 54

- replacing 54

- function keys 26

## G

- Gateway

- model number 15

- serial number 15, 16

- support 16

- Web address 3

- Web site 3

- Gigabit Ethernet 82

## H

- hard drive

- troubleshooting 65

- headphone jack 11, 14

- help

- online 7

- using 5

- Help and Support 5

- searching 6

- starting 5

- Hibernate mode 11

## I

- i.Link port 11, 13, 32

- IEEE 1394 port 11, 13, 32

- indicators

- Caps Lock 27

- Num Lock 27

- numeric keypad 27

- power 11

- Scroll Lock 27

- inkjet printer 16

- installing

- battery 57

- devices 32

- digital camera 32

- digital video camera 32

- front bezel 52
- memory 55
- peripheral devices 32
- printer 32
- scanner 32
- side panel 51
- system battery 57
- Internet
  - broadband connection 31
  - buttons 26
  - troubleshooting 66, 70
- IP address
  - entering 86
  - LAN 91
  - WAN 91
- J**
- jacks
  - See connections*
- K**
- keyboard
  - buttons 26
  - cleaning 46
  - features 26
  - PS/2 port 14
  - troubleshooting 67
  - USB port 11, 14
- keys and buttons
  - application 27
  - arrow 27
  - audio playback 26
  - directional 27
  - editing 26
  - function 26
  - Internet 26
  - mouse 28
  - navigation 26
  - numeric 27
  - power 11
  - Windows 27
- L**
- label
  - Microsoft Certificate of Authenticity 15
  - model number 15
  - serial number 15
  - LAN IP Address 91
  - laser printer 16
  - LCD panel
    - cleaning 47
    - troubleshooting 64, 72
  - lights
    - See indicators*
  - line in jack 14
  - line out jack 14
- M**
- maintenance
  - cleaning case 46
  - cleaning component exteriors 46
  - cleaning computer display 47
  - cleaning computer screen 47
  - cleaning keyboard 46
  - cleaning mouse 47
  - protecting from viruses 43
- memory
  - adding 55
  - installing 55
  - purchasing 16
  - replacing 55
  - troubleshooting 68
- memory card reader
  - locating 10
  - memory card types supported 35
  - using 35
- microphone jack 11, 14
- Microsoft Certificate of Authenticity 15
- model number 15
- modem
  - cable 31, 83, 89
  - connecting 31
  - DSL 31, 83, 89
  - jack 13, 31
  - protecting from power surge 22
  - troubleshooting 68
- monitor
  - cleaning 47
  - port 14
  - troubleshooting 72
- mouse
  - buttons 28

- cleaning 47
- clicking 29
- double-clicking 29
- moving pointer 28, 29
- moving screen objects 29
- opening files, folders, and programs 29
- pointer 28
- PS/2 port 14
- right-clicking 29
- scroll wheel 28
- selecting screen objects 29
- troubleshooting 74
- USB port 11, 14
- moving
  - pointer 29
  - screen objects 29
- MP3 player
  - memory cards 35
- multimedia
  - adjusting volume 30
  - playing DVD 39
  - using DVD drive 37
  - using Windows Media Player 39
- muting sound 30

## N

- name
  - computer 85
  - domain 91
  - router 91
  - workgroup 85
- naming
  - computers 85
  - workgroup 85
- navigation keys 26
- network
  - jack 31
  - testing 92
  - troubleshooting 74, 93
- network jack 13
- non-technical support
  - Accounting 79
  - Sales 79
  - Warranty 79
- Norton Antivirus 43
- Norton Internet Security 43

- numeric keypad 27
  - indicator 27

## O

- online help 5, 7
- opening
  - computer case 51
  - files 29
  - folders 29
  - front bezel 52
  - programs 29
  - shortcut menu 29

## P

- Pad Lock indicator 27
- parallel port 13
- password 74
- PDA
  - memory cards 35
- peripheral devices 32
- playing
  - audio CD 39
  - DVD 39
- Plug and Play devices
  - IEEE 1394 support for 32
  - USB support for 32
- pointer 28
  - moving 29
- ports
  - See connections
- power
  - button 11
  - connector 13
  - Hibernate mode 11
  - indicator 11
  - source problems 22
  - Standby/Resume 11
  - troubleshooting 75
  - turning off computer 24
  - turning on computer 23
- power button 11
- printer
  - default 75
  - inkjet 16
  - installing 32
  - laser 16

- parallel port 13
- troubleshooting 75
- USB port 11, 14
- programs
  - closing unresponsive 25
  - opening 29
- PS/2 port
  - keyboard 14
  - mouse 14

## R

### RAM

- See* memory

- rebooting computer 25
- recordable drive 11, 17
  - locating 11
  - troubleshooting 61
- recording
  - CDs 39
  - DVDs 39
- resetting computer 25
- restarting computer 25
- restoring system 48
- Resume mode 11
- right-clicking 29
- router
  - configuring 90
  - name 91

## S

### safety

- avoiding repetitive strain 21
- caring for computer 42
- general precautions 96
- guidelines for troubleshooting 60
- posture 21
- reducing eye strain 20
- setting up computer 20
- static electricity 50

### scanner

- installing 32

### screen

- cleaning 47
- troubleshooting 72

### screen objects

- getting information 29

- moving 29
- selecting 29
- Scroll Lock indicator 27
- scroll wheel 28
- searching
  - in Help and Support 6
- serial number 15, 16
- serial port 14
- setting up
  - safety precautions 96
- shortcut menus
  - accessing 29
- shortcuts
  - opening menu 29
- shutting down computer 24, 25
- side panel
  - removing 51
  - replacing 51
- sound
  - adjusting 30
  - controls 30
  - muting 30
- speaker jack 14
- speakers
  - configuring 30
- specifications 16
- Standby mode 11
- starting
  - computer 11, 23
  - programs 29
- static electricity 50
- subnet mask
  - entering 86
- support 16
- surge protector 22
- S-Video (TV) out jack 13
- system battery
  - replacing 57
- system identification label 15
- system restore 48

## T

- tape backup drive 17
- TCP/IP protocol
  - configuring 86
- technical support 16

- automated troubleshooting 79
  - Technical Support 79
  - tips before contacting 78
  - tutorial service 79
- telephone support 78
- testing network 92
- training
  - CD 80
  - classroom 80
  - Gateway Learning Libraries 80
  - Learn With Gateway 80
- troubleshooting
  - add-in cards 61
  - automated system 79
  - cards 61
  - CD drive 61
  - cleaning CD 47
  - cleaning DVD 47
  - computer startup 63
  - diskette drive 63
  - display 64
  - DVD drive 61, 64
  - DVD/CD drive 61, 64
  - Ethernet network 93
  - faxes 70
  - files 64
  - general guidelines 60
  - hard drive 65
  - Internet connection 66, 70
  - keyboard 67
  - LCD panel 64, 72
  - memory 68
  - memory card reader 68
  - modem 68
  - monitor 72
  - mouse 74
  - network 74
  - passwords 74
  - power 75
  - printer 75
  - safety guidelines 60
  - screen 64, 72
  - screen area 72
  - screen resolution 72
  - technical support 78
  - telephone support 78

- Web site connection speed 66
  - turning off computer 11, 24, 25
  - turning on computer 11, 23
- tutoring
  - fee-based 80
- TV out (S-Video out) jack 13

## U

- uninterruptible power supply (UPS) 17, 22
- updating
  - device drivers 3
- updating Windows 42
- UPS 17, 22
- USB port 11, 14, 32

## V

- video
  - playing 39
  - S-Video out jack 13
- virus
  - protecting against 43
  - removing with Norton Internet Security 43
- voltage switch 13
- volume
  - adjusting 30
  - adjusting modem 71
  - controls 30
  - muting 30
  - troubleshooting 77

## W

- WAN IP Address 91
- Web site
  - Gateway 3
- Windows
  - Product Key Code 15
  - restoring 48
- Windows key 27
- Windows Media Player 39
- Windows Security Center
  - using 43
- Windows Update 42
- wired Ethernet
  - troubleshooting 93
- workgroup

naming 85  
working safely 20

## **Z**

Zip drive 17  
port 11, 14





MAN 6BAY MBTX CONS GDE R0 8/05

